

# **NP-81XXA**

## **(Human Machine Interface)**

### **User Manual**

<b><u>Release Date</u></b>	<b><u>Revision</u></b>
Jan. 2010	V1.0
Nov. 2010	V1.1
Mar. 2011	V1.2

©2010

All Rights Reserved.

IVC Displays, Inc.

# Warning! \_\_\_\_\_

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

## Packing List

Accessories (as ticked) included in this package are:
<input type="checkbox"/> AC power cable
<input type="checkbox"/> Driver & manual CD disc
<input type="checkbox"/> Other. _____ (please specify)

## Safety Precautions

Follow the messages below to prevent your systems from damage:

- ? Avoid your system from static electricity on all occasions.
- ? Prevent electric shock. Don't touch any components of this card when the card is power-on.  
Always disconnect power when the system is not in use.
- ? Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

# Table of Contents

---

Warning!.....	2
Packing List.....	3
Safety Precautions.....	3

## **Chapter 1**

## **Getting Started**

1.1 Features.....	6
1.2 Specifications.....	6
1.3 Dimensions.....	8
1.4 Installation of HDD.....	14
1.5 Brief Description.....	16
1.6 Panel Mounting and VESA Mounting.....	17

## **Chapter 2**

## **Hardware**

2.1 Mainboard specifications.....	18
2.2 Installations memory.....	24
2.3 Connector and Jumpers.....	25

## **Chapter 3**

## **BIOS Setup**

3.1 Operations after POST Screen.....	35
3.2 Standard CMOS Features.....	37
3.3 Advanced BIOS Features.....	40
3.4 Advanced Chipset Features Setup.....	43
3.5 Integrated Peripherals.....	47
3.6 Power Managements Setup.....	53
3.7 PnP/PCI Configurations Setup.....	56
3.8 PC Health Status.....	58
3.9 Load Fail-Safe/Optimized Defaults.....	59
3.10 Set Administrator/User Password.....	61
3.11 Save & Exit Setup.....	62
3.12 Exit Without Saving.....	63

## **Chapter 4**

## **Installation of Drivers**

4.1 Intel Chipset Driver.....	65
4.2 Intel Graphics Media Accelerator Driver.....	68
4.3 Realtek Gigabit LAN Device Driver.....	72

4.4 Realtek HD Driver Installation.....	75
---	----

## **Chapter 5**

## **Touch Screen Installation**

5.1 Introduction to Controller Board.....	78
5.2 Windows 2000/XP USB Driver Installation for 6000 Boards.....	78

## **Figures**

Figure 1.1: NP-8800A Dimensions.....	8
Figure 1.2: NP-8100A Dimensions.....	9
Figure 1.3: NP-8120A Dimensions.....	10
Figure 1.4: NP-8150A Dimensions.....	11
Figure 1.5: NP-8170A Dimensions.....	12
Figure 1.6: NP-8190A Dimensions.....	13
Figure 1.7: Front View .....	16
Figure 1.8: Rear View.....	16
Figure 1.9: Panel Mounting and VESA Mounting.....	17
Figure 2.1: Mainboard Overview.....	18
Figure 2.2: Mainboard Dimensions.....	19
Figure 2.3: Connector and Jumper Locations.....	20
Figure 2.4 Installation of Memory Module.....	24
Figure 5.1 Bird eye's View of Control Board .....	78

## 1.1 Features


- Fanless design
- 5.7"/8"/10.4"/12.1"/15"/17"/19" High brightness TFT LCD with resolution of 640x480/800x600/1024x768/1280x1024
- Intel® Atom™ N270 1.6GHz processor, FSB 533MHz
- NEMA 4/ IP 65 compliant front panel
- Sealed resistive touch screen
- One 200-pin SO-DIMM socket, up to 2GB DDR2 533MHz SDRAM
- DC 11~28V wide-range power input

## 1.2 Specifications

<b>System</b>	
Processor	Intel® Atom™ N270 1.6GHz, FSB 533MHz
System Memory	1 x 200-pin SO-DIMM socket, support 533MHz up to 2GB SDRAM
System Chipset	Intel® 945GSE + ICH7M
External I/O Port	<b>NP-8800A, NP-8150A, NP-8170A</b> 4 x USB port 2 x RJ-45 port 2 x DP-9 (COM 1/3, RS-232) 1 x DP-9 (COM 2, RS-232/422/485 support Full-duplex, Default RS-232) <b>** Optional RS-422/485 Module support half-duplex</b> 1 x VGA port 1 x Audio Lin out 1 x DC power input
Storage	1 x 2.5" SATA HDD, 1 x Internal CF slot
OS Support	XP Pro, XP embedded, Windows &
<b>LCD</b>	
Display Type	TFT-LCD
Max. Resolution	800x600 <b>NP-8800A</b> 1024x768 <b>NP-8150A</b> 1280x1024 <b>NP-8170A</b>
Max. Color	262K <b>NP-8800A</b> 16.2M <b>NP-8150A, NP-8170A</b>
Luminance (cd/m <sup>2</sup> )	400 (cd/m <sup>2</sup> ) <b>NP-8800A</b>


	350 (cd/m <sup>2</sup> ) <b>NP-8150A</b> 300 (cd/m <sup>2</sup> ) <b>NP-8170A</b>
View Angle	H:130° / V:120° ( <b>NP-8800A</b> ) H:130° / V:110° ( <b>NP-8100A</b> ) H:140° / V:110° ( <b>NP-8120A</b> ) H:140° / V:125° ( <b>NP-8150A</b> ) H:160° / V:160° ( <b>NP-8170A / NP-8190A</b> )
Backlight Lifetime	40,000hrs ( <b>NP-8800A / NP-8120A</b> ) 30,000hrs ( <b>NP-8100A</b> ) 50,000hrs ( <b>NP-8150A / NP-8170A / NP-8190A</b> )
<b>Touch Screen</b>	
Type	Analog resistive
Light Transmission	80%
<b>Power Supply</b>	
Power Input	DC 11~32V
<b>Mechanical</b>	
Construction	Plastic molding front panel and metal housing / Black ( <b>NP-8800A / NP-8100A / NP-8120A / NP-8150A</b> ) Steel Metal front panel and housing / Black ( <b>NP-8170A / NP-8190A</b> )
IP Rating	IP 65 on Front Panel
Mounting	Panel / VESA 75x75 Mount
Dimension	231 (W) x176 (H) x99 (D) mm ( <b>NP-8800A</b> ) 317 (W) x243 (H) x76 (D) mm ( <b>NP-8100A</b> ) 317 (W) x243 (H) x76 (D) mm ( <b>NP-8120A</b> ) 410 (W) x310 (H) x83 (D) mm ( <b>NP-8150A</b> ) 439 (W) x348 (H) x84 (D) mm ( <b>NP-8170A</b> ) 484 (W) x400(H) x 94 (D) mm ( <b>NP-8190A</b> )
<b>Environmental</b>	
Operating Temperature	0~50 ? C
Storage Temperature	-20~60 ? C
Storage Humidity	10~90% @40? non-condensing
Certificate	CE/FCC Class A

## 1.3 Dimensions

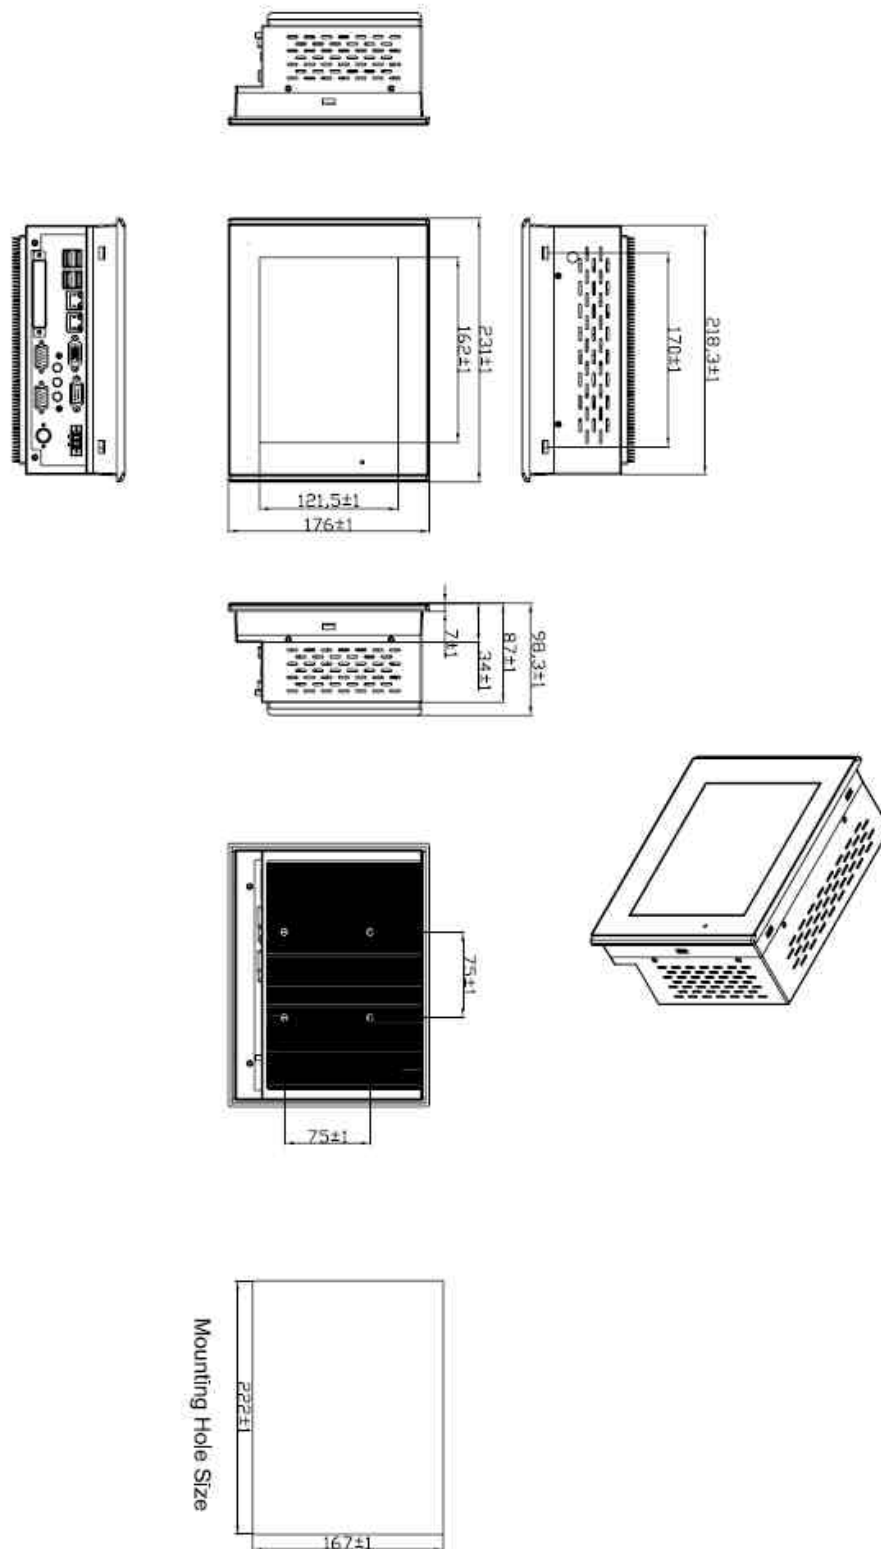


**Figure 1.1: Dimensions of the NP-8800A**




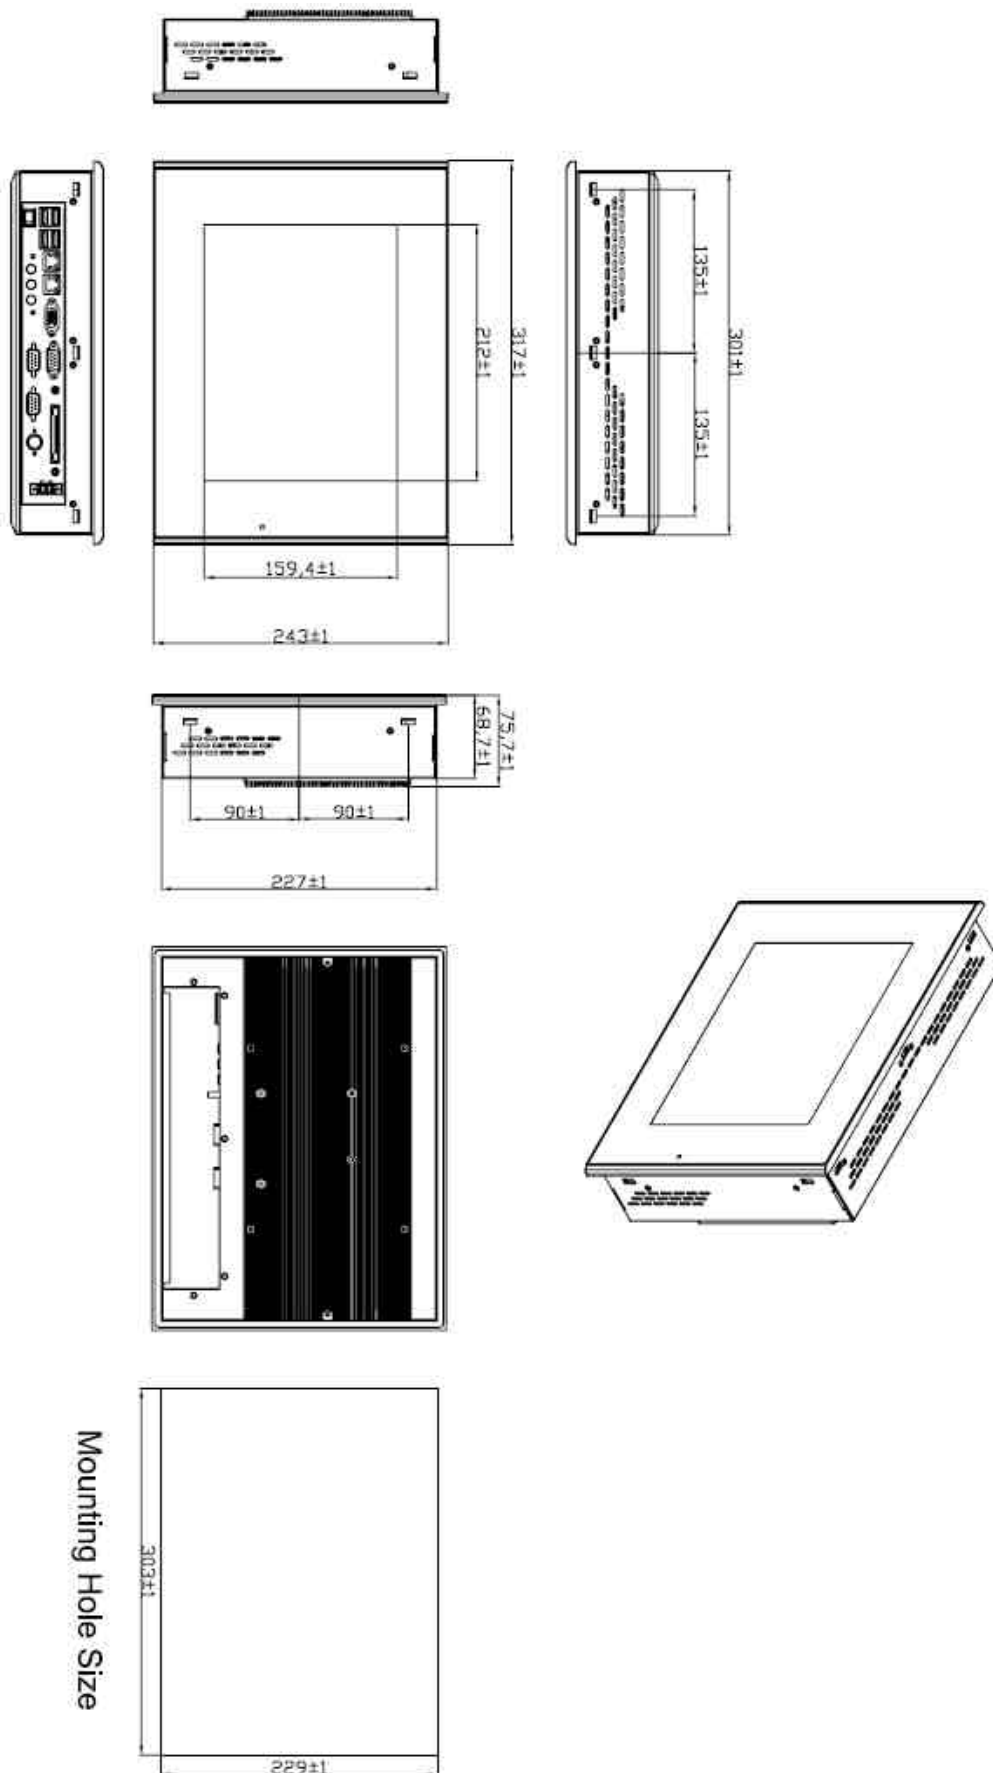


**Figure 1.2: Dimensions of the NP-8100A**

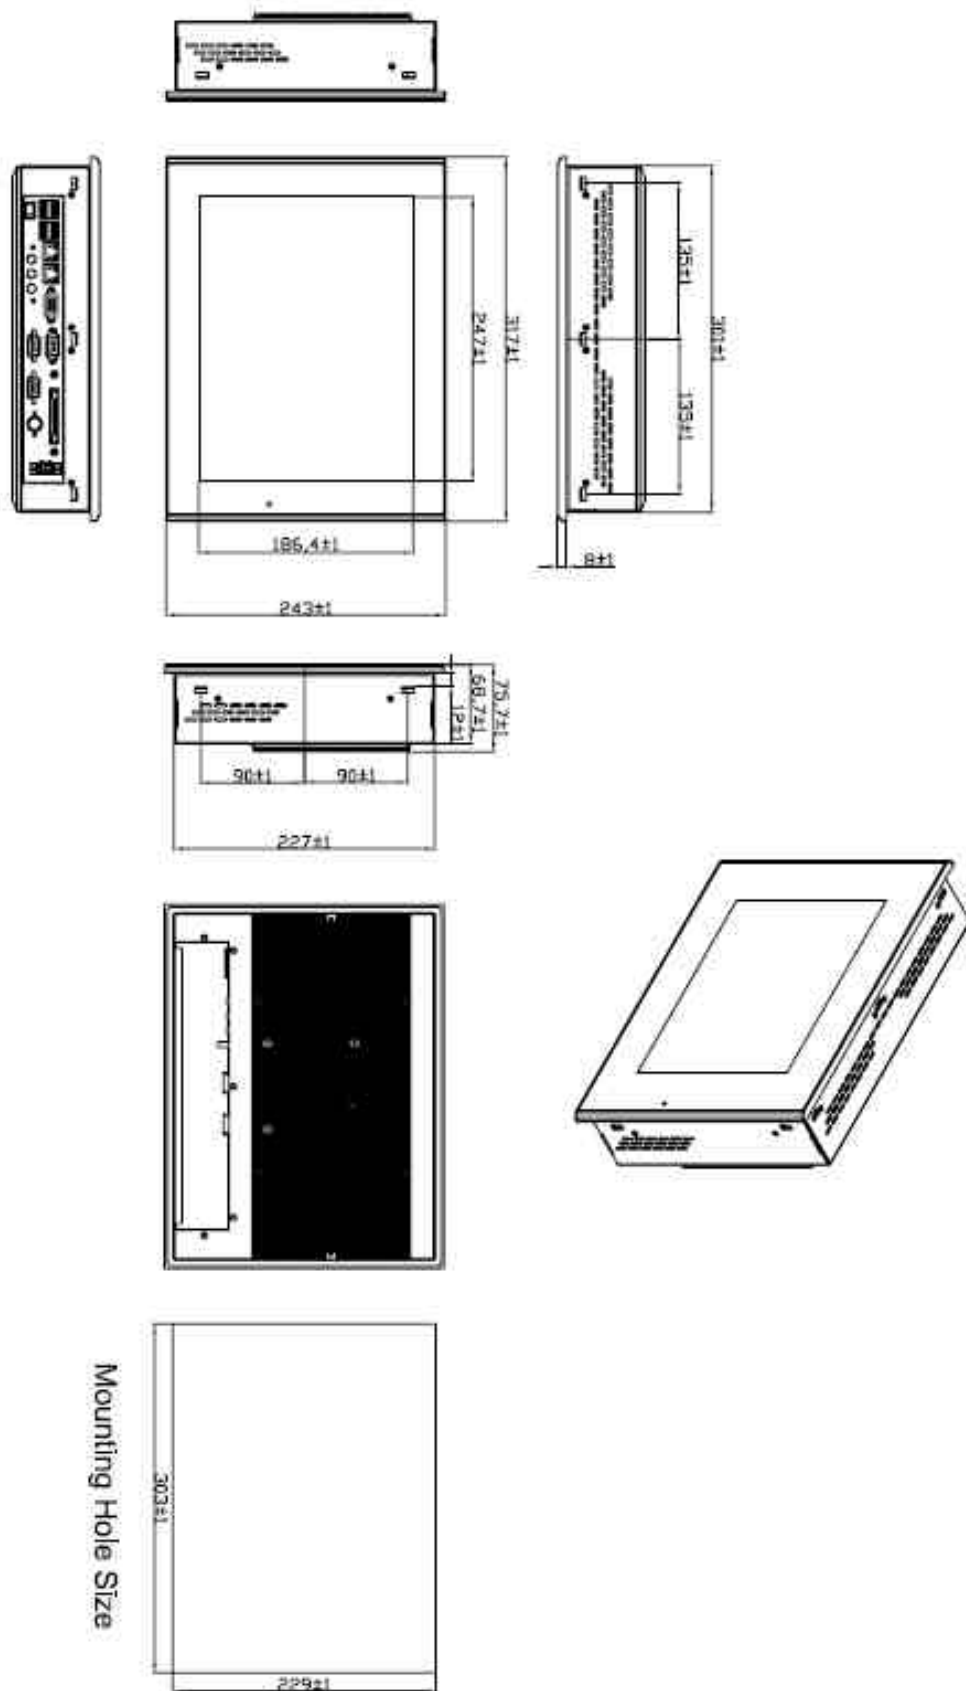


**Figure 1.3: Dimensions of the NP-8120A**

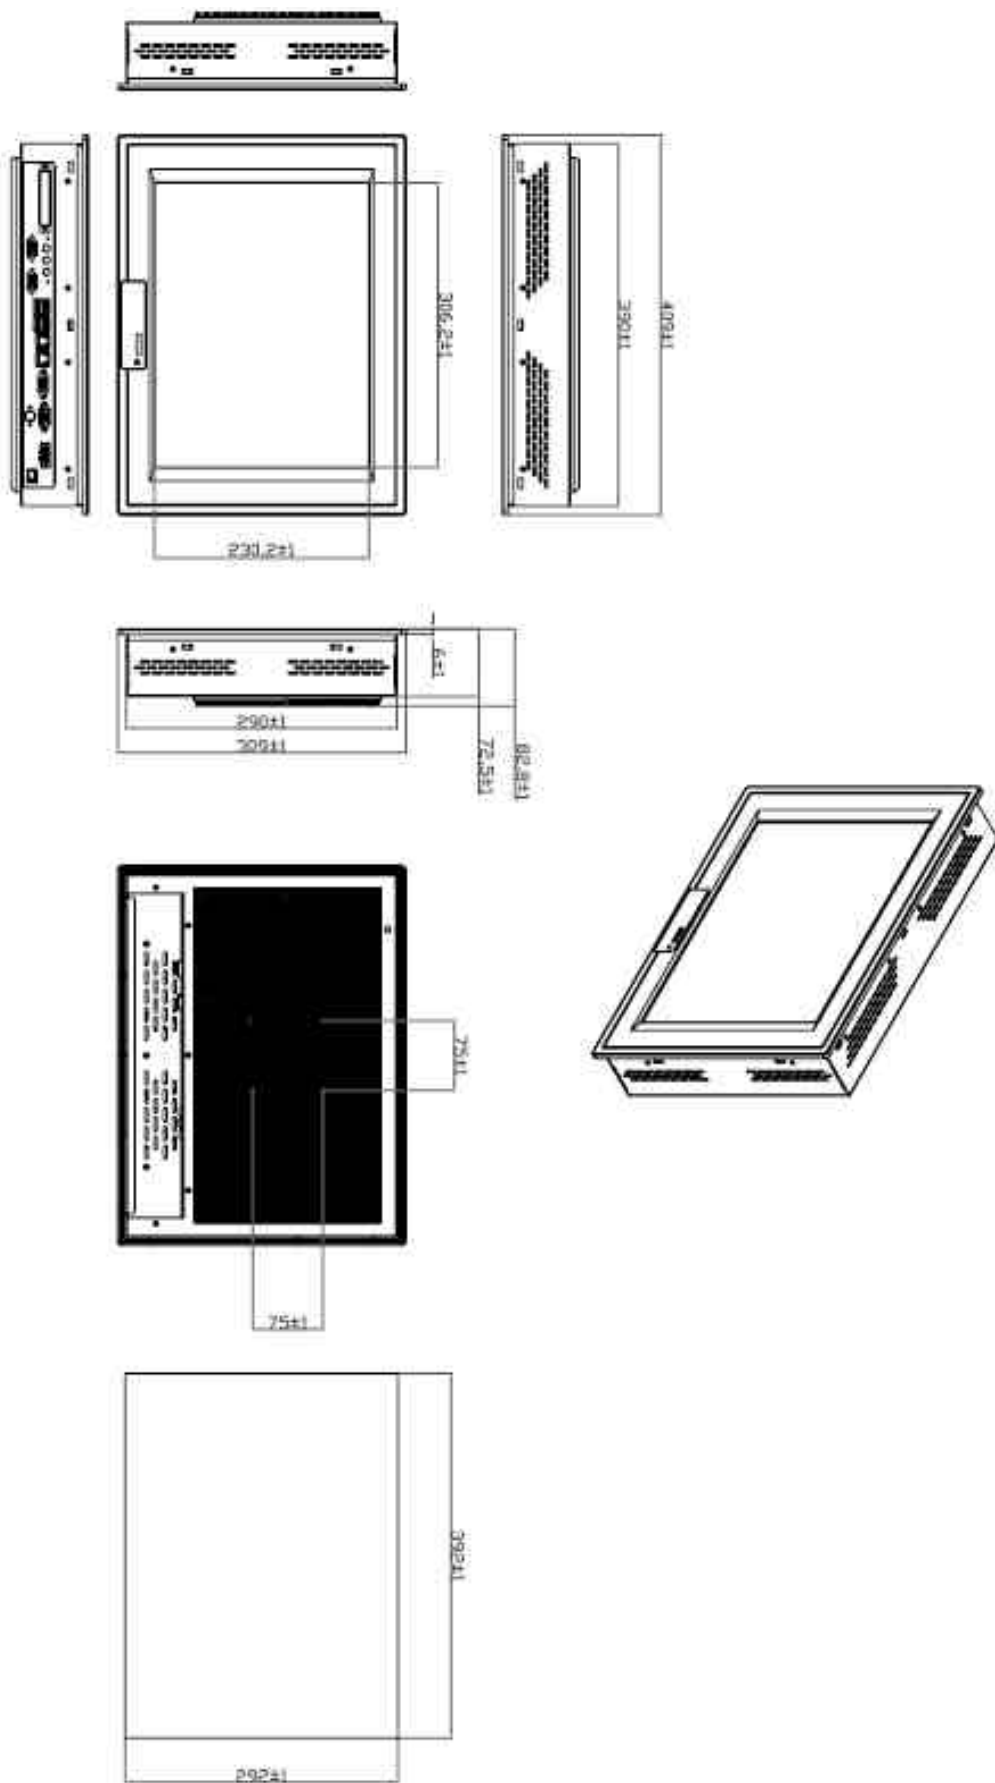

**Figure 1.4: Dimensions of the NP-8150A**

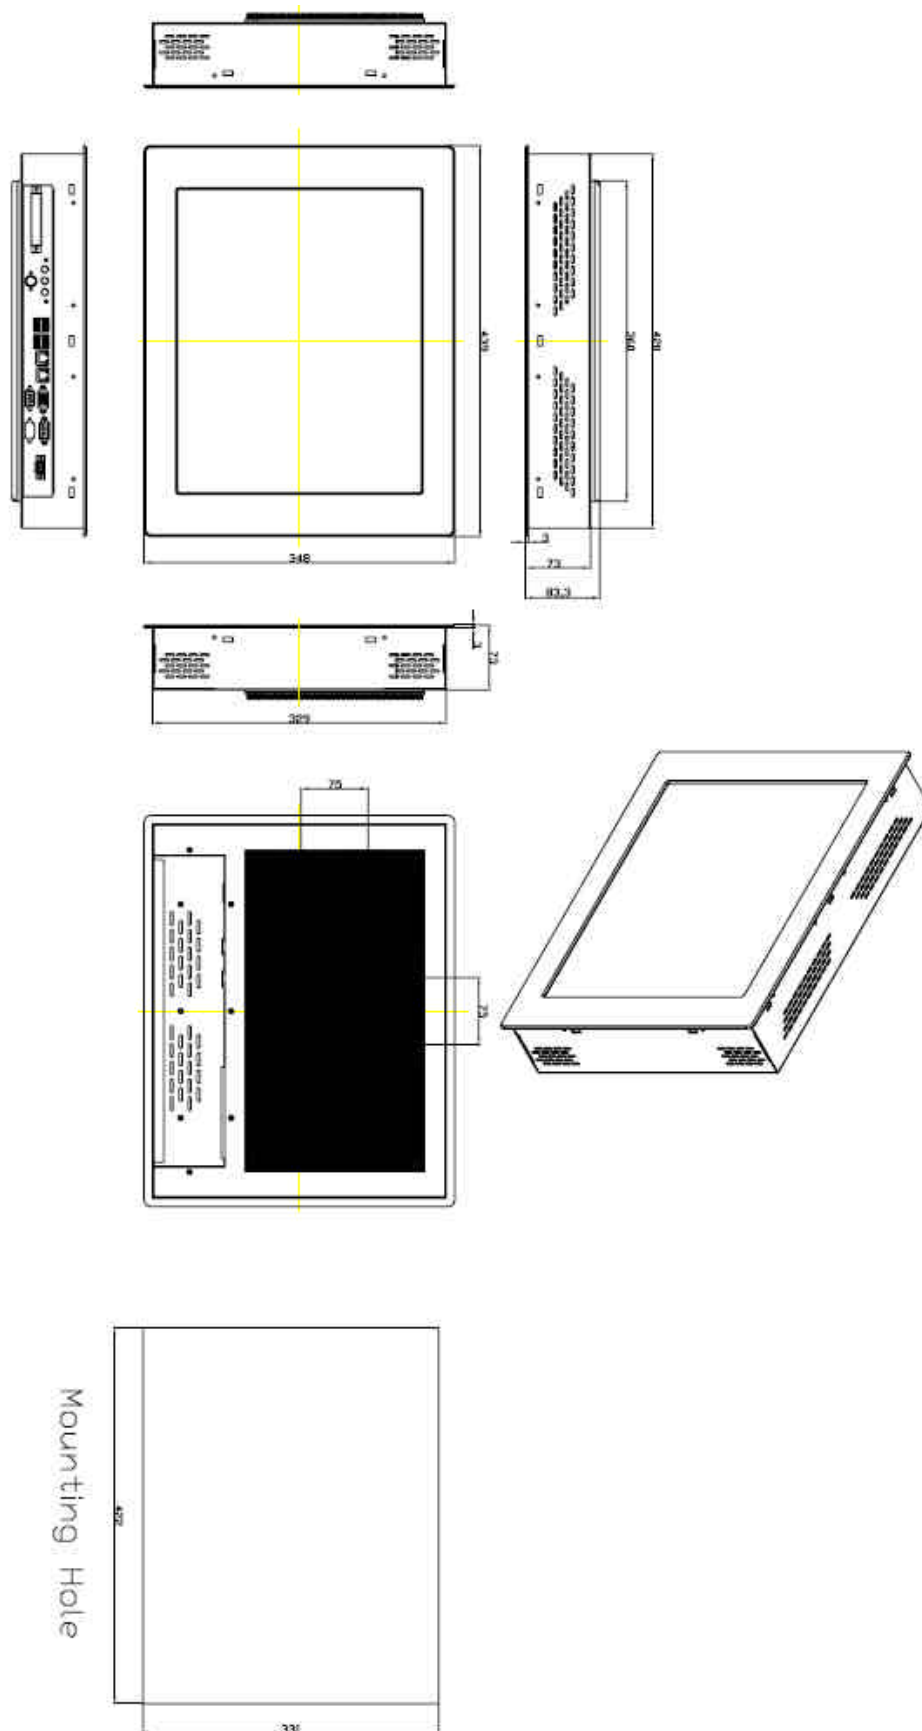

**Figure 1.5: Dimensions of the NP-8170A**

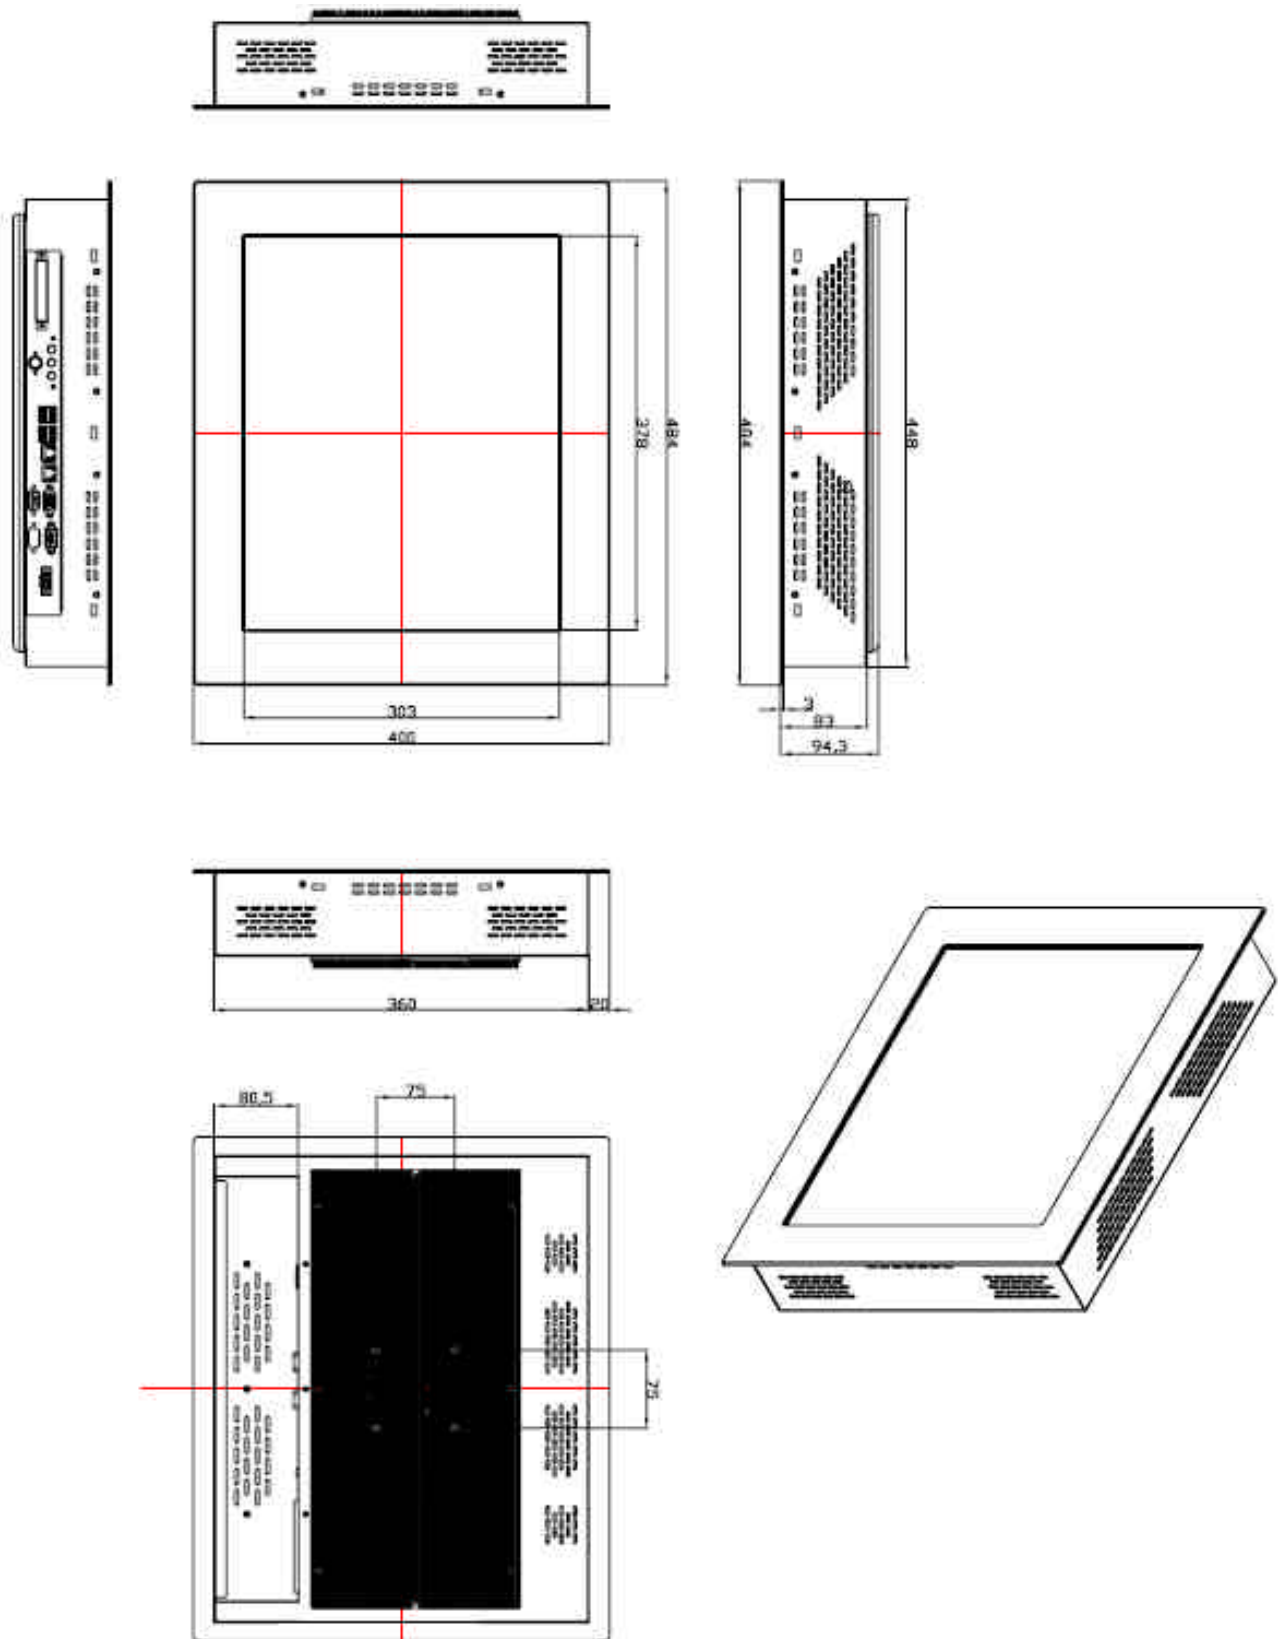


**Figure 1.6: Dimensions of the NP-8190A**

## 1.4 Installation of HDD


### Step 1

There are 12 screws to deal with when enclosing or removing the chassis.

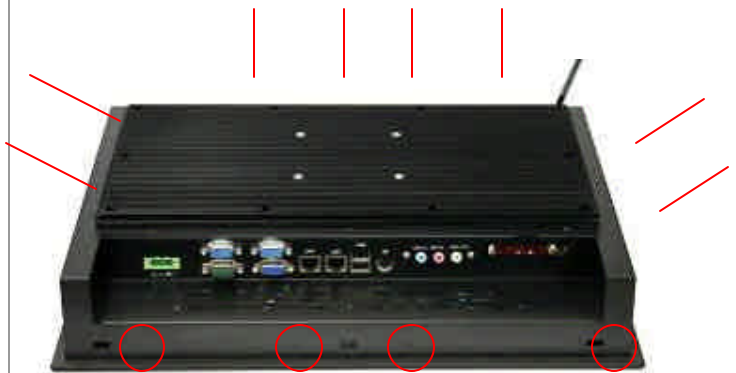


### Step 2

Get the HDD screwed to the bracket with the four screws as shown by the arrows in the picture.

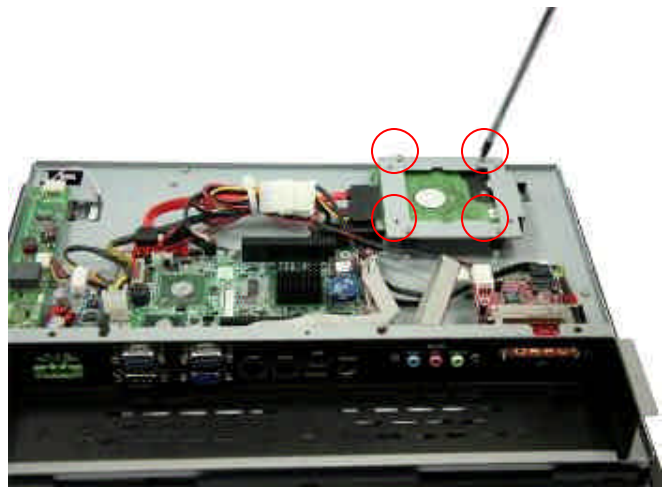


### Step 3

Connect the cable to the HDD as shown in the picture, making sure the red stripe of the cable is rightly positioned.

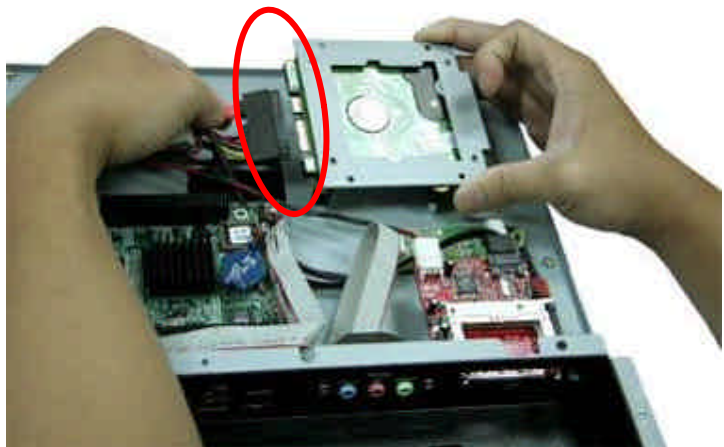

#### Step 4

Get the four screws as circled tightened to secure the HDD. As shown in the picture

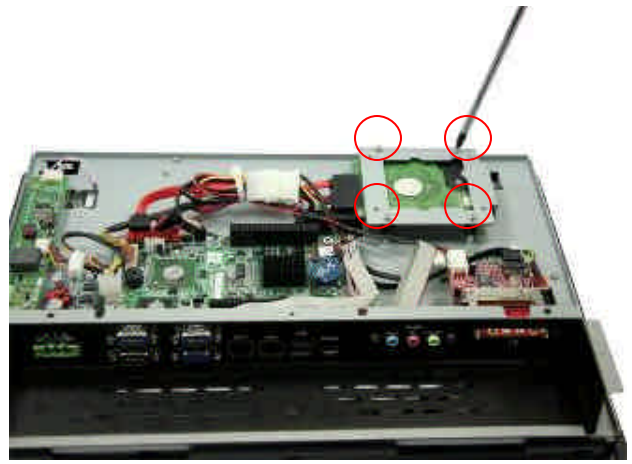


#### Step 5

Connect the other end of the cable to the SATA connect as shown in the picture.



#### Step 6

That's how it should look after it has been installed.

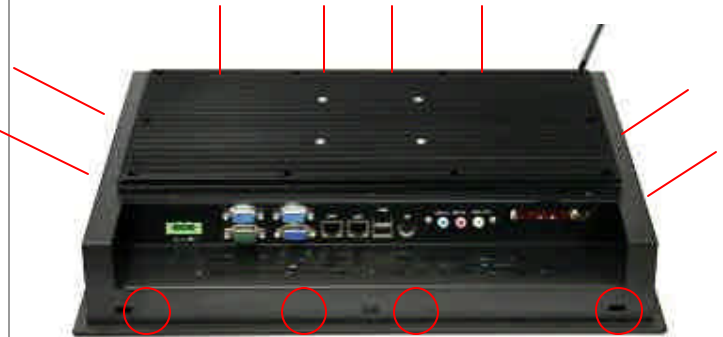

## 1.5 Brief Description of the NP-8xxxA

The NP-8XXXA is a power-optimized and delivers robust performance-per-watt for embedded HMI. The powered by an Atom™ N270 processor, implemented in 45nm technology. It comes with a compact flashslot, 2.5-inch hard disk drive, DDR2 memory, 3 serial ports, audio, 2 Ethernet, DC input, and 2 USB ports. The unit supports Windows XP, Windows XP P and Embedded The compact, fanless touch panel computer is ideal for use as Web Browser, Terminal and HMI at all levels of automation control.



**Figure 1.7: Front View of NP-8150A**




**Figure 1.8: Rear View of NP-8150A**




## 1.6 Panel Mounting and VESA Mounting of NP-8xxxA

The NP-8xxxA HMI is designed to be panel-mounted and VESA mounted as shown in Picture . Just carefully place the unit through the hole and tighten the given 10 screws from the rear to secure the mounting.

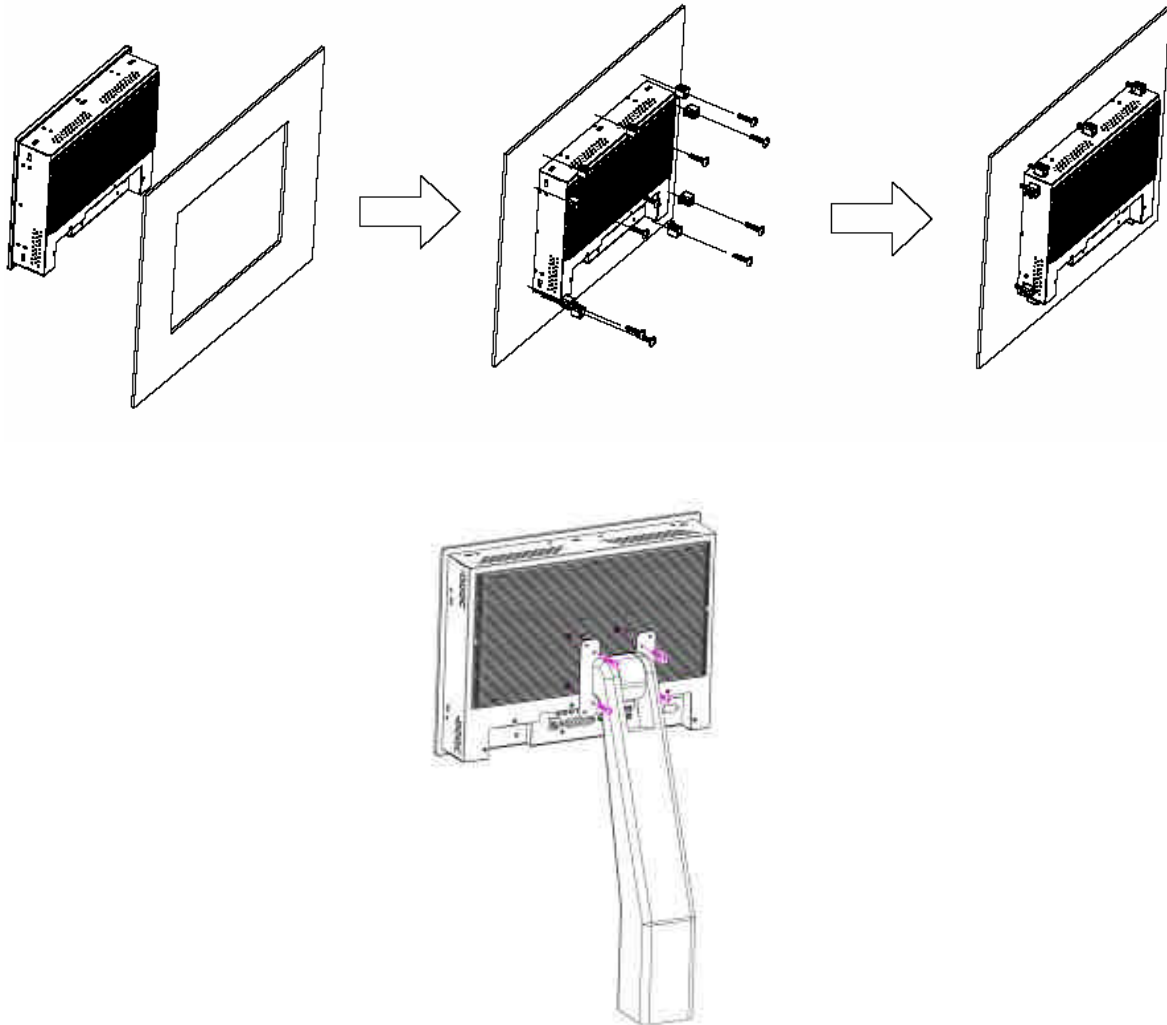


**Figure 1.9 Panel mounting and VESA mounting of the NP-8xxxA**


## 2.1 Mainboard Specifications

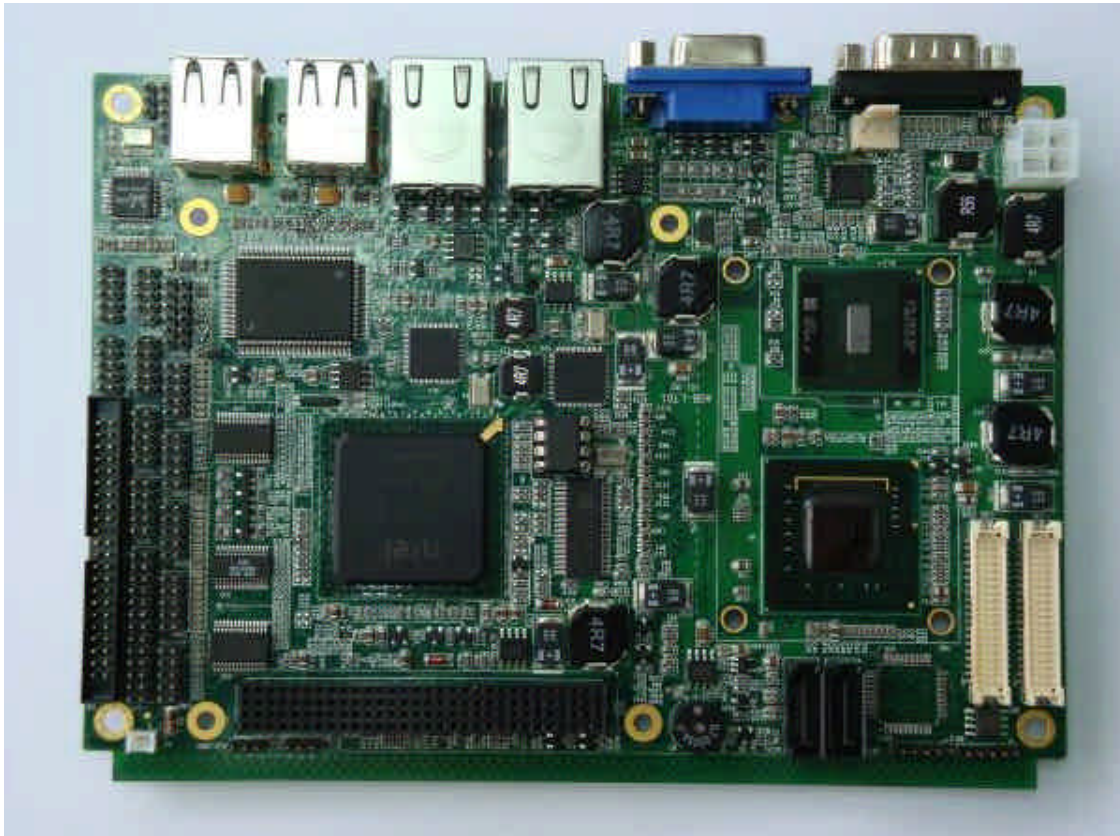

**Figure 2.1: Mainboard Overview**



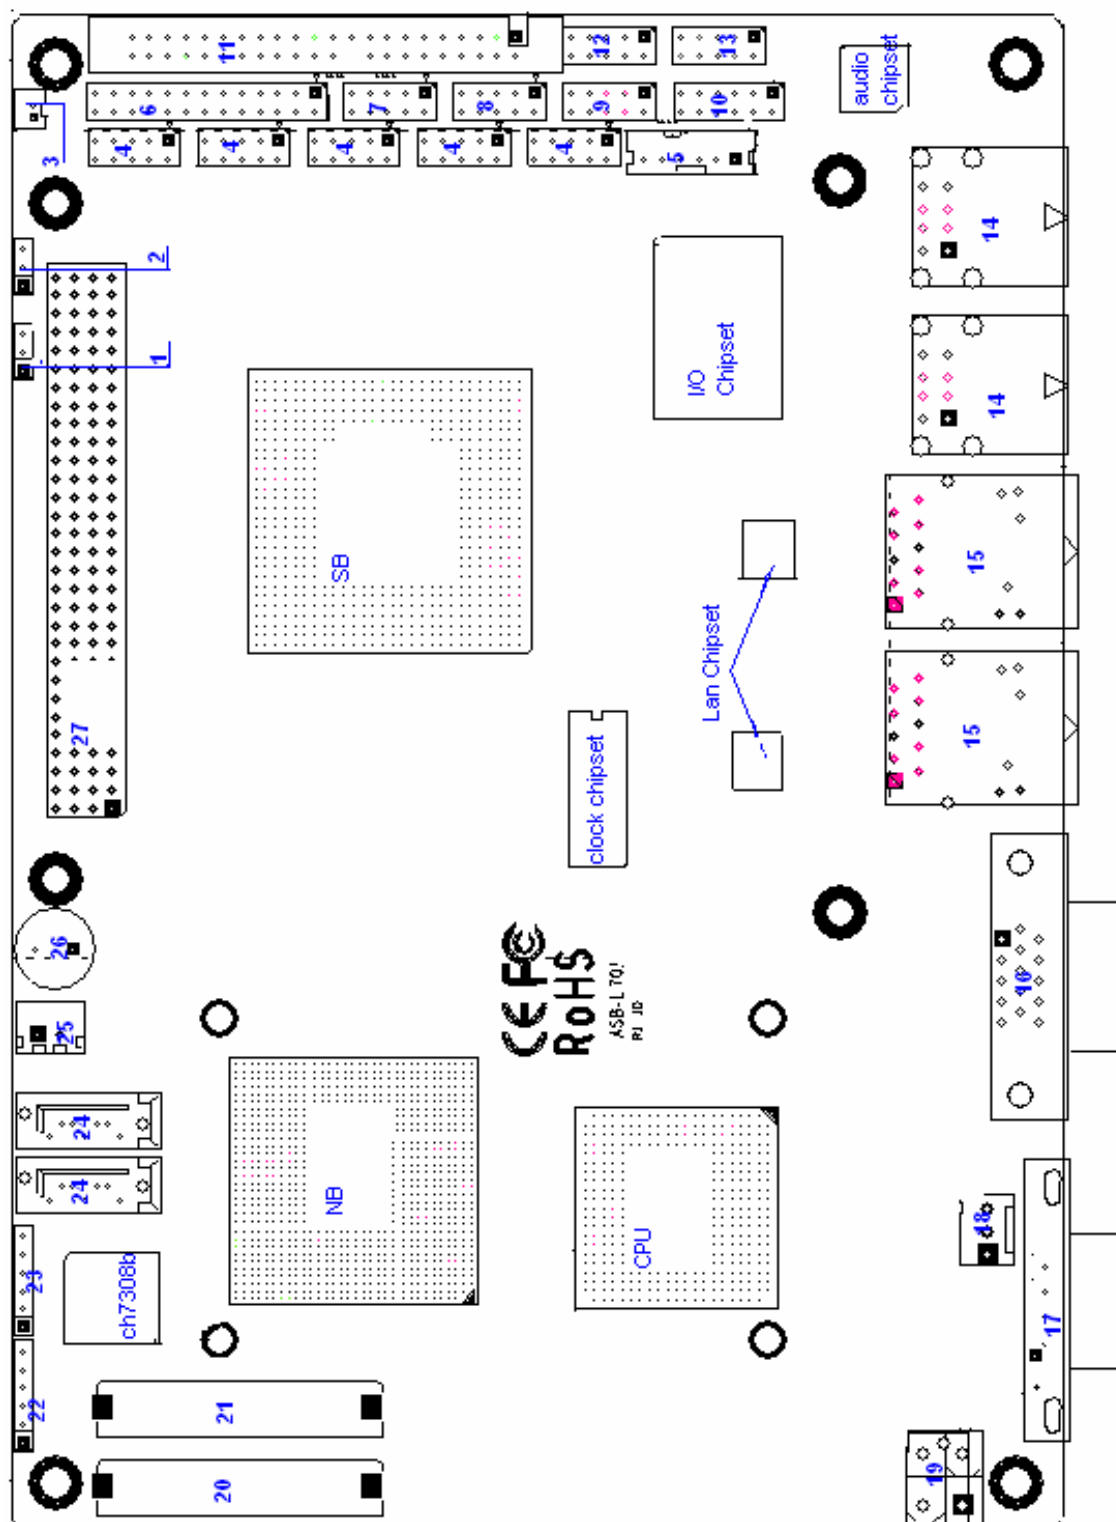

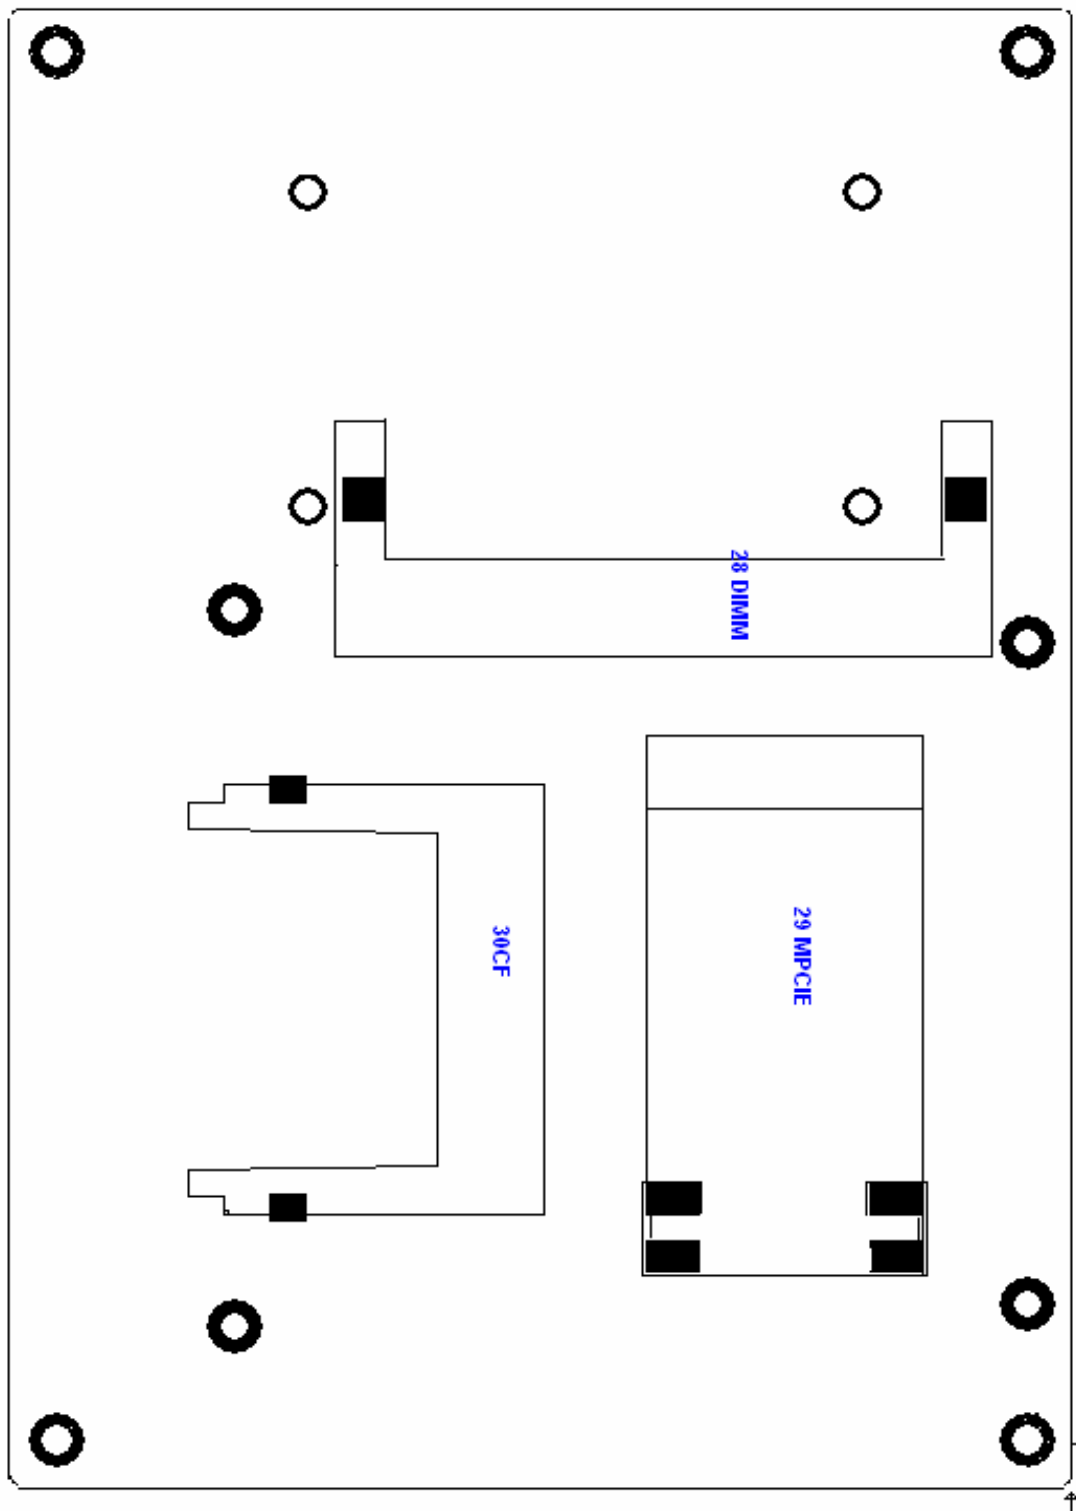

**Figure 2.3: Connector and Jumper Locations**


Mainboard Specifications	
<b>Board Size</b>	165 x 115mm
<b>CPU Support</b>	Intel Atom N270 1.6 GHz with 533MHz FSB
<b>Chipset</b>	Intel 945GSE + Intel ICH7M
<b>Memory Support</b>	1x200pin 533/400MHz DDR2 SO-DIMM support, up to 2GB SDRAM
<b>Graphics</b>	Intel Graphics Media Accelerator 950VGA integrated in Intel 945GSE 18-bit dual-channel LVDS integrated in Intel 945GSE 18/24 bit dual-channel LVDS support by Chronitel CH7308B 1 x DB15 Female connector for external
<b>Super I/O</b>	Winbond W83627UHG
<b>BIOS</b>	Award BIOS
<b>Storage</b>	2 x SATA Connector 1 x Compact Flash II Slot 1 x 44-pin IDE Connector
<b>Network</b>	2 x Gigabit Ethernet Port by RJ45 with LED indicators - Ethernet controller : 2 x PCIe by one bus Realtek 8111D
<b>USB</b>	4 x USB 2.0 stack port for external 2 x USB 2.0 header for internal
<b>Serial</b>	1 x RS232 port, DB9 connector for external (COM1), pin 9 w/5V/12V/Ring select 1 x RS232/422/485 (Full-duplex) select header for internal (COM2), default RS232 4 x RS232 header for internal (COM3 – COM6)
<b>Digital I/O</b>	8-bit digital I/O by header 4-bit digital Input 4-bit digital Output
<b>Battery</b>	Support CR2477 battery by 2-pin header
<b>Audio</b>	Support Audio via Realtek ALC662 HD audio decoder Support Line-in, Line-out, MIC by 2x5-pin header
<b>Printer</b>	1x LPT port by 2x13-pin header
<b>Keyboard /Mouse</b>	1x PS2 keyboard/mouse by 1x6-pin wafer connector

<b>Expansion Bus</b>	1x PC 104+ connector (PCI master 4, jumper for +3.3V & 5V select) 1x PCIe (PCI-e 1x +SMBUS+USB2.0) mini card
<b>Power Management</b>	DC12V input 1 x 2x2-pin power input connector
<b>Front I/O</b>	by 2x5-pin header Power on/off switch Reset switch Power LED status HDD LED status Buzzer
<b>Watchdog Timer</b>	Software programmable 1 – 255 second by Super I/O
<b>External I/O port</b>	1 x COM Port (COM1) 4 x USB 2.0 Ports (stack) 2 x RJ45 GbE Port (10/100/1000Mbps) 1 x VGA Port
<b>Temperature</b>	Operating: 0 – 60 degree C Storage: -20 – 80 degree C
<b>Humidity</b>	5% - 95%, non-condensing, operating
<b>Power Consumption</b>	12V @1.4 5A (Intel N270 processor with 1GB DDR2 DRAM)
<b>EMI/EMS</b>	CE/FCC class A

## 2.2 Installations

### 2.2.1 SO-DIMM Installation

To install a SO-DIMM into a SO-DIMM socket, please follow the steps below and refer to picture.

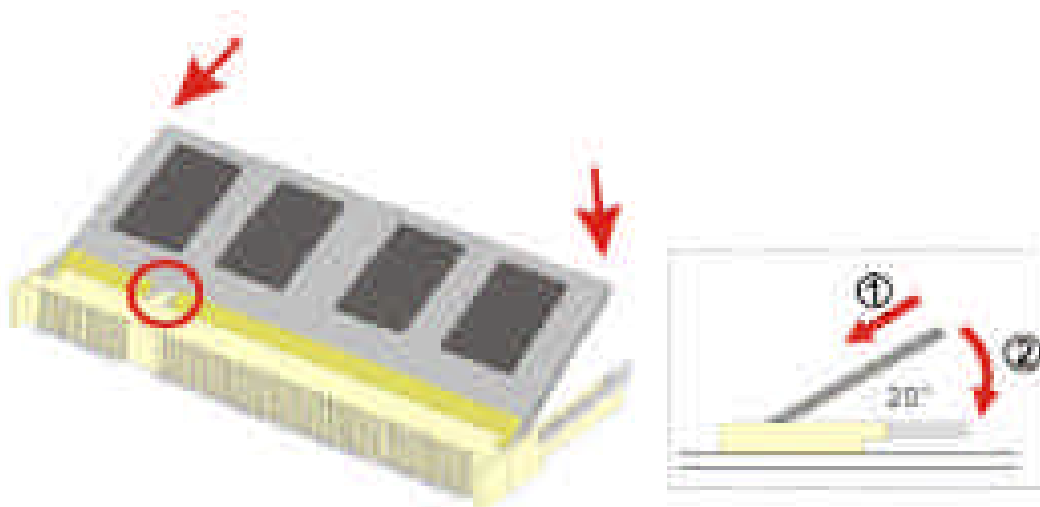

**Figure 2.4: Installation of Memory Module**

#### **Step 1:**

**Locate the SO-DIMM socket.** Place the NANO-945GSE2 on an anti-static pad with the solder side facing up.

#### **Step 2:**

**Align the SO-DIMM with the socket.** The SO-DIMM must be oriented in such away that the notch in the middle of the SO-DIMM must be aligned with the plastic bridge in the socket.

#### **Step 3:**

**Insert the SO-DIMM.** Push the SO-DIMM chip into the socket at an angle. (See **Figure 2.3**)

#### **Step 4:**

**Open the SO-DIMM socket arms.** Gently pull the arms of the SO-DIMM socket out and push the rear of the SO-DIMM down



## 2.3 Onboard Jumpers and Port Pin outs

**1. JVCCIO (2.0MM 1X3) PC104+ port voltage selection jumper:** select voltage for PC104+ device

JVCCIO	PC104+ VCCIO Voltage
<b>CLOSE 1-2</b>	<b>+3.3V (default)</b>
CLOSE 2-3	+5V

**2. JCLR\_CMOS (2.0MM 1X3) CMOS clear jumper:** CMOS clear operation will permanently reset old BIOS settings to factory defaults.

JCLR_CMOS	CMOS
<b>CLOSE 1-2</b>	<b>NORMAL (default)</b>
CLOSE 2-3	CLEAR CMOS



Procedures of CMOS clear:

1. Turn off the system and unplug the power cord from the power outlet;
2. To clear the CMOS settings, use the jumper cap to close pins 2 and 3 for about 3 seconds then reinstall the jumper clip back to pins 1 and 2.
3. Power on the system again;
4. When entering the POST screen, press the <DEL> key to enter CMOS Setup Utility to load optimal defaults;
5. After the above operations, save changes and exit BIOS Setup.

**3. BAT (1.25.0MM 1X2) Battery port:** a 3.3V battery is embedded to provide power for CMOS.

PIN#	Signal Name
PIN1	VBAT
PIN2	Ground

**4.COM2-COM6 (2.0MM 2X5) COM2~COM6 port:** up to 5 standard RS232 ports are provided. They can be used directly via COM adapter cable connection.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR
Ground	5	6	DSR
RTS	7	8	CTS
RI	9	10	NC



Note: COM2 port is controlled by pins No.8~10 of JCOM. For details, please refer to description of JCOM.

**5.KB/MS (2.0MM 1X6) PS/2 keyboard/mouse port:** the port can be connected to PS/2 keyboard or mouse via a dedicated adapter cable for direct use.

Pin#	Signal Name
1	KBDATA
2	MSDATA
3	Ground
4	+5V
5	KBCLK
6	MSCLK

**6. LPT (2.0MM 2X13) Parallel port:** a standard 26 pin parallel port is provided to connect parallel peripherals as required.

Signal Name	Pin#	Pin#	Signal Name
PSTB#	1	2	PD0
PD1	3	4	DP2
DP3	5	6	DP4
DP5	7	8	DP6
DP7	9	10	ACK#

BUSY	11	12	PE
SLCT	13	14	AFD#
ERR#	15	16	INIT#
SLIN#	17	18	Ground
Ground	19	20	Ground
Ground	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground

**7. GPIO (2.0MM 2X5) General-purpose input/output port:** it provides a group of self-programming interfaces to customers for flexible use.

Signal Name	Pin#	Pin#	Signal Name
GPIO20	1	2	GPIO60
GPIO21	3	4	GPIO61
GPIO22	5	6	GPIO62
GPIO23	7	8	GPIO63
Ground	9	10	+5V

**8. COM22 (2.0MM 2X5):** it provides selectable RS422/485 serial signal output.

Signal Name	Pin#	Pin#	Signal Name
A	1	2	Terminal Resistance
B	3	4	Terminal Resistance
Z	5	6	NC
Y	7	8	NC
Ground	9	10	NC

**9. USB4 (2.0MM 2X5) Front USB connector:** it provides two USB ports via a dedicated USB adapter cable.

Signal Name	Pin#	Pin#	Signal Name
+5V	1	2	+5V
USB_P6_DN	3	4	USB_P7_DN
USB_P6_DP	5	6	USB_P7_DP
Ground	7	8	Ground

NC	9	10	Ground
----	---	----	--------



Note:

Before connection, make sure that pin out of the USB adapter is in accordance with that of the said tables. Any inconformity may cause system down and even hardware damages.

**10. JCOM (2.0MM 2X6) COM1/2 setup jumper:** pin 1~6 are used to select signal out of pin 9 of COM1 port; pin 7~12 are used to select output type for COM2 port (RS232 or RS422/485 Full-Duplex).

JCOM	Function
<b>CLOSE 1-2</b>	<b>COM1 Pin9=RI (default)</b>
CLOSE 3-4	COM1 Pin9=+5V
CLOSE 5-6	COM1 Pin9=+12V
<b>CLOSE 7-9</b> <b>CLOSE 8-10</b>	<b>COM2 FOR RS232 FROM COM2 (default)</b>
CLOSE 9-11 CLOSE 10-12	COM2 FOR RS485/RS422 FROM COM22



Note:

1. As determined by its hardware design, the board features full-duplex RS485 communication. Like RS422, a four-wire connection is necessary.
2. Since COM2 and COM22 use the same address, they cannot work at the same time.

**11. IDE (2.0MM 2X22) IDE connector:** the motherboard provides a 44-pin IDE connector for connection of 2.5' IDE hard disk drivers and supports up to 2 IDE devices.

Signal Name	Pin#	Pin#	Signal Name
RESET	1	2	Ground
IDE_PDD7	3	4	IDE_PDD8
IDE_PDD6	5	6	IDE_PDD9
IDE_PDD5	7	8	IDE_PDD10
IDE_PDD4	9	10	IDE_PDD11
IDE_PDD3	11	12	IDE_PDD12
IDE_PDD2	13	14	IDE_PDD13
IDE_PDD1	15	16	IDE_PDD14
IDE_PDD0	17	18	IDE_PDD15
Ground	19	20	NC
DREQ	21	22	Ground

IOW#	23	24	Ground
IOR#	25	26	Ground
IOCHRDY	27	28	Ground
DACK#	29	30	Ground
IRQ14	31	32	NC
Address 1	33	34	IDE_PDIAG
Address 0	35	36	Address 2
Chip select 0	37	38	Chip select 1
Activity	39	40	Ground
+5V	41	42	+5V
Ground	43	44	NC



Note:

If two IDE devices are connected, CF card connection cannot be realized.

## 12. F\_PANEL (2.0MM 2X5) Front panel connector

Signal Name	Pin#	Pin#	Signal Name
HD LED+	1	2	POWER LED+
HD LED-	3	4	POWER LED-
Ground	5	6	PWRBTN
RESET	7	8	Ground
BUZZER+	9	10	BUZZER-

PIN1&3: They are used to connect hard disk activity LED. The LED blinks when the hard disk is reading or writing data.

PIN2&4: They are used to connect power LED. When the system is powered on or under S0/S1 state, the LED is normally on; when the system is under S4/S5 state, the LED is off.

PIN5&6: They are used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

PIN7&8: They are used to connect reset button. The two pins are disconnected under normal condition. You may short them temporarily to realize system reset.

PIN9&10: They are used to connect an external buzzer.



Note:

When connecting LEDs and buzzer, pay special attention to the signal polarity.

Make sure that the connector pins have a one-to-one correspondence with chassis wiring, or it may cause boot up failure.

**13. F\_AUDIO (2.0MM 2X5) Front Audio:** An onboard REALTEL ALC662 CODEC is used to provide high-quality audio I/O ports; Line Out can be connected to a headphone or amplifier; Line In is used for the connection of external audio source via a Line in cable; Mic is the port for microphone input audio.

Signal Name	Pin#	Pin#	Signal Name
FRONT-OUT-L	1	2	LINEIN_R
AUD_AGND	3	4	AUD_AGND
FRONT-OUT-R	5	6	LINEIN_L
AUD_AGND	7	8	AUD_AGND
FRONT-MIC1	9	10	AUD_AGND



**Note:**

The board only supports mono microphone input.

**14. USB1/2 Rear USB connector:** it provides up to 4 USB2.0 ports.

**15. LAN1/2 Rear LAN connectors:** 2 standard 1000M RJ-45 Ethernet ports are provided. LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

**16. VGA (Video Graphic Array):** GMA950 GPU is integrated to provide high-quality video output.

**17. COM Rear serial port:** standard DB9 serial port is provided to make a direct connection to serial devices.

**18. FAN (2.54MM 1X3) Fan connector:** cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in PC Health Status menu of BIOS Setup.

Pin#	Signal Name
1	Ground
2	+12V
3	Rotation detection



Note: Output power of cooling fan must not be above 5W.

## 19. AT12V (5.0MM 1X2) 12V System power input connector

Pin#	Signal Name
1	+12V
2	Ground



Note:

Make sure that the voltage of power supply is DC(12±5%)V before power on, or it may cause boot up failure and even system damage.

## 20. LVDS1 for dual 18 bit 18-bit LVDS output connector: Fully supported by INTEL945GSE

chipset, the interface features single and dual channel 18-bit output with maximum resolution support up to 1600\*1200. The format of connected display screen is SPWG. Model name of the interface connector is Hirose DF13-40DP-1.25V.

Signal Name	Pin#	Pin#	Signal Name
+5V	1	2	+5V
Ground	3	4	Ground
+3.3V	5	6	+3.3V
LADATAN0	7	8	LBDATAN0
LADATAP0	9	10	LBDATAP0
Ground	11	12	Ground
LADATAN1	13	14	LBDATAN1
LADATAP1	15	16	LBDATAP1
Ground	17	18	Ground
LADATAN2	19	20	LBDATAN2
LADATAP2	21	22	LBDATAP2
Ground	23	24	Ground
LACLKN	25	26	LBCLKN
LACLKP	27	28	LBCLKP
Ground	29	30	Ground
LDDC_CLK	31	32	LDDC_DATA
Ground	33	34	Ground

NC	35	36	NC
NC	37	38	NC
NC	39	40	NC

**21. LVDS1 for dual 24 bit 24-bit LVDS output connector:** Fully supported by CHRONTEL CH70308BE chipset, the interface features single and dual channel 18-bit and 24-bit output with maximum resolution support up to 1600\*1200. The format of connected display screen is OPENLDI. Model name of the interface connector is Hirose DF13-40DP-1.25V.

Signal Name	Pin#	Pin#	Signal Name
+5V	1	2	+5V
Ground	3	4	Ground
+3.3V	5	6	+3.3V
A0M	7	8	A4M
A0P	9	10	A4P
Ground	11	12	Ground
A1M	13	14	A5M
A1P	15	16	A5P
Ground	17	18	Ground
A2M	19	20	A6M
A2P	21	22	A6P
Ground	23	24	Ground
CLK1M	25	26	CLK2M
CLK1P	27	28	CLK2P
Ground	29	30	Ground
SC_DDC	31	32	SD_DDC
Ground	33	34	Ground
A3M	35	36	A7M
A3P	37	A3M	A7P
NC	39	40	NC

**22. BKL2 (2.0MM 1X6) Backlight control connector for LVDS2**

Pin#	Signal Name
1	+12V
2	+5V



3	Ground
4	Ground
5	ENABKL
6	NC

### 23. BKL1 (2.0MM 1X6) Backlight control connector for LVDS1

Pin#	Signal Name
1	+12V
2	+5V
3	Ground
4	Ground
5	LBKLT_EN
6	LBKLT_CTRL



Note: Remember that BLK1 supports LVDS1 and BLK2 supports LVDS2 during wiring. The two must not be confused.

**24. SATA1/2 SATA Connectors:** two SATA connectors are provided, with transfer speed up to 3.0Gb/s.

**25. CN1 (2.5MM 1X2):** an onboard 5V output connector is reserved to provide power for IDE/SATA devices.

Pin#	Signal Name
1	+5V
2	Ground



Note:  
Output current of the connector must not be above 1A.

**26. BZ Buzzer:** onboard buzzer

**27. PC104+ PC104+ connector:** it conforms to standard PC104+ specification.

**28. DIMM Memory socket** the socket is located at the backside of the board and supports 200PIN 1.8V DDRII400/533 memory module up to 2G. If a DDRII667/800 memory module is installed, the system will reduce the DRAM frequency to 533MHz.

**29. MPCIE Mini PCIE slot:** it supports MINI PCIE devices with USB2.0, SMBUS and PCIE signal.

**30. CF Card Slot** it is located at the backside of the board and serves as an insert interface for Type I and Type II Compact Flash card. The operating voltage of CF card can be set as 3.3V or 5V. The default setting of the product is 3.3V.

## 3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, the system will display the following screen for your further operation. Press **F1** key to continue or **Del** key to enter CMOS Setup.

```
Phoenix - AwardBIOS v6.00PG, An Energy Star Ally
Copyright © 1984-2007, Phoenix Technologies, LTD

ASB-L701 V012

Main Processor : Intel® Atom™ 1.60GHz(133x12)
Memory Testing :515008K OK + 8M shared memory
CPU Brand Name : Intel® Atom™ CPU N270    @1.60GHz
C1E BIOS Supported
Hyper-Threading Technology CPU Detected
(Hyper-Threading Technology Enabled)

Memory Frequency For DDR2 533
IDE Channel 0 Master : None
IDE Channel 0 Slave  : None
IDE Channel 1 Master : None
IDE Channel 1 Slave  : None

CMOS checksum error - Defaults loaded

Press F1 to continue, DEL to enter SETUP
11/25/2009-Silverthrone-6A79KAPXC-00
```

After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

```
Phoenix - AwardBIOS v6.00PG, An Energy Star Ally
Copyright © 1984-2007, Phoenix Technologies, LTD

ASB-L701 V012


Main Processor : Intel® Atom™ 1.60GHz(133x12)
Memory Testing :515008K OK + 8M shared memory
CPU Brand Name : Intel® Atom™ CPU N270    @1.60GHz
C1E BIOS Supported
Hyper-Threading Technology CPU Detected
(Hyper-Threading Technology Enabled)

Memory Frequency For DDR2 533
IDE Channel 0 Master : None
IDE Channel 0 Slave  : None
IDE Channel 1 Master : None
IDE Channel 1 Slave  : None
```



```
Press DEL to enter SETUP, F12 to Enter Boot Menu
11/25/2009-Silverthrone-6A79KAPXC-00
```

Press **F12** key to enter Boot Menu during POST, as shown by the following figure.

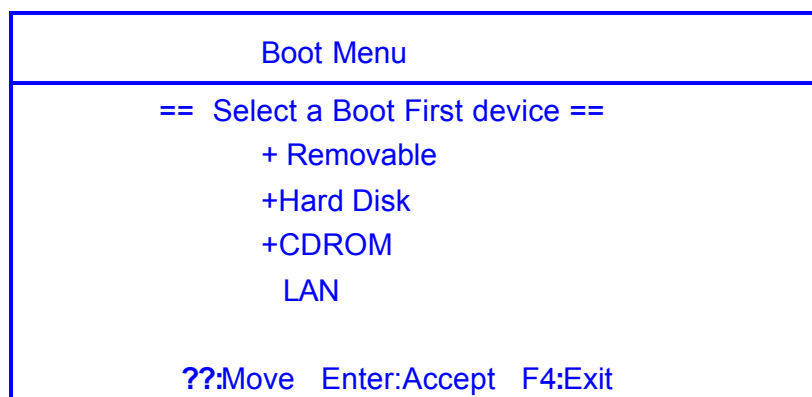

## 3.2 Standard CMOS Features

Press [Del] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

Phoenix – Award BIOS CMOS Setup Utility	
? Standard CMOS Features	Load Fail-Safe Defaults
? Advanced BIOS Features	Load Optimized Defaults
? Advanced Chipset Features	Set Administrator Password
? Integrated Peripherals	Set User Password
? Power Management Setup	Save & Exit Setup
? PnP/PCI Configurations	Exit Without Saving
? PC Health Status	
Esc : Quit	??? ? : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

### Standard CMOS Features

Use this menu to modify basic system configurations such as time, date and etc.

### Advanced BIOS Features

Use this menu configure advanced features of Award® BIOS.

### Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

### Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

### Power Management Setup

Use this menu to specify your settings for power management.

### PnP/PCI Configurations

This menu is valid only if your system supports PnP/PCI.

## PC Health Status

This menu shows the current status of your PC.

## Load Fail-Safe Defaults

Use this menu to load Fail-Safe defaults into BIOS for the most stable, and minimal-performance system operations.

## Load Optimized Defaults

Use this menu to load factory settings into BIOS for optimal-performance system operations.

## Set Administrator Password

Use this menu to set Administrator password.

## Set User Password

Use this menu to set user password.

## Save & Exit Setup

Save all changes to the CMOS and exit BIOS Setup.

## Exit Without Saving

Abandon all changes to the CMOS and exit BIOS Setup.

The following figure shows the items of Standard CMOS Features menu, which may exclude any modifiable subitem or contain one or more modifiable subitems. Use arrow keys to select the items to be modified and <PgUp> or <PgDn> key to select desired settings.

Phoenix – AwardBIOS CMOS Setup Utility

### Standard CMOS Features

Date (mm:dd:yy)	Thu, Dec 3	
2009		Item Help
Time (hh:mm:ss)	14 : 31: 6	
		Menu Level?
? IDE Channel 0 Master	[None]	Change the
? IDE Channel 0 Slave	[None]	day, month,
? IDE Channel 1 Master	[None]	year and
? IDE Channel 1 Slave	[None]	century
Video	[EGA/VGA]	
Halt On	[All, But	
Keyboard]		
Base Memory	639K	

Extended Memory	1038336K
Total Memory	1039360K

??? ? :Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

## Date

This item allows you to set a desired system date (usually current date). The date format is <day><month><date><year>.

**Day** It is a read-only and bios-defined weekday attribute ranging from Sun (Sunday) to Sat (Saturday).

**Month** It is a month attribute ranging from Jan (January) to Dec (December).

**Date** It is a date attribute ranging from 1 to 31 and can be modified via numeric keys.

**Year** It is a user-defined year attribute.

## Time

This item allows you to set a desired system time (usually current time). The time format is <hour><minute><second>.

## Channel 0 Master / Channel 0 Slave

## Channel 1 Master / Channel 1 Slave

Press PgUp/<+> or PgDn/<-> key to select among Manual, None and Auto type. Note that the specification of your drive device must be in compliance with the contents of Drive Table. If the information registered in this item is not correct, your hard disk will not work properly; if your hard disk specification is not found or does not conform to or the Driver Table, you may select Manual type to set the specification manually.

If you choose Manual, you will be requested to enter relevant information in the following entries. Keyboard input is also supported. For details, you may refer to the instructive materials provided by distributor or device manufacturer.

If a SCSI HDD device is used, set this item to "NONE".

If a CD-ROM drive is connected to the HDD port, set this item to "NONE"

**AccessMode** Options are: Auto, Normal, Large and LBA

**Cylinder** Number of cylinders

**Head** Number of heads

**Precomp** Write precompensation cylinder

**Landing Zone** Head landing zone

## Halt on

The item allows you to determine when the system will stop. Options are: No Errors; All Errors; All, But Keyboard.

No Errors The system boot will not stop for any error.

All Errors Whenever the BIOS detects a non-fatal error, the system boot will stop.

All, But Keyboard The system boot will not stop for a keyboard error but stop for all other errors as detected by BIOS. (default)

### 3.3 Advanced BIOS Features

Phoenix – AwardBIOS CMOS Setup Utility

#### Advanced BIOS Features

? CPU Feature	[Press Enter]	Item Help
? Hard Disk Boot Priority	[Press Enter]	
Virus Warning	[Disabled]	Menu Level?
CPU L1 & L2 Cache	[Enabled]	
Hyper-Threading Technology	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[Removable]	
Second Boot Device	[Hard Disk]	
Third Boot Device	[CDROM]	
Boot Other Device	[Enabled]	
Boot Up NumLock Status	[On]	
Gate A20 Option	[Fast]	
X APIC Mode	[Enabled]	
MPS Version Control For OS	[1.4]	
OS Select For DRAM > 64MB	[Non-OS2]	
Small Logo [EPA] Show	[Disabled]	
Security Option	[Setup]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

#### CPU Feature

The item has the following options:

Delay Prior To Thermal [16 Min] (This item allows you to set the duration of entering CPU thermal throttling.)

C1E Function [Auto] CPU Power-saving State Enable Control

CPU C State Capability [C1] CPU Power-saving State Control



Execute Disable Bit [Enable] (Virus Protection Technology)

### **Hard Disk Boot Priority (IDE Storage Device Boot Priority)**

This item is used to specify boot priority of IDE devices. Press "Enter" key for detailed setting.

### **Virus Warning**

This item has two options: "Disabled" and "Enabled".

### **CPU L1 & L2 Cache**

This item can be used to enable or disable the CPU's primary (L1) or secondary (L2) cache. If set to Enabled, operating speed of PC will be increased remarkably; if set to Disabled, the function will be inactivated.

### **Hyper-Threading Technology**

Enable and disable Intel's hyper-threading technology.

### **Quick Power On Self Test**

This item is used to accelerate Power On Self Test (POST) process. If set to Enabled, BIOS will shorten or skip some of its tests.

Enabled (default)      Quick POST

Disabled                Normal POST

### **First/Second/Third/Boot Other Device**

BIOS will load the operating system according to the boot order of available devices. If disabled, the function will be inactivated.

### **Boot Up NumLock Status (Default: On)**

On (default)      Keypad numeric keys remain valid

Off                Keypad arrow keys remain valid

### **Gate A20 Option**

Normal      Gate A20 signal is controlled by keyboard controller or chipset hardware.

Fast (default)      Gate A20 signal is controlled by port 92 or specific programs of chipset.

### **APIC Mode**

It refers to an advanced interrupt controller mode to meet the requirements of multi-core CPU.

### **MPS Version Control For OS**

This item is used to specify the multiprocessor specification version of the system. It is recommended to keep the default value (1.4).

## OS Selection for DRAM > 64MB

You must only select OS/2 when installing an OS/2 operating system with a RAM greater than 64MB. The options are: Non-OS/2 (default) and OS/2.

## Small Logo [EPA] Show

This item is used to determine whether the Energy Star Logo will be displayed during POST. The options are: "Disabled" and "Enabled".

## Security Option

Such option allows users to set access restrictions to both system and **Setup** utility, or just **Setup** utility.

- |                 |  |
|-----------------|--|
| System          | If one fails to enter a valid password in the popup box, the system will not boot up and the Setup utility will not be accessible.       |
| Setup (default) | If one fails to enter a valid password in the popup box, the system will boot up as usual, but the Setup utility will not be accessible. |

## 3.4 Advanced Chipset Features Setup

Advanced Chipset Features Setup is used to change the values of chipset registers that control most options of computer.

Select ADVANCED CHIPSET FEATURES in the main menu, and the following screen will be displayed.

Phoenix – AwardBIOS CMOS Setup Utility

Advanced Chipset Features

DRAM Timing Selectable [By SPD]	Item Help
X CAS Latency Time Auto	Menu Level?
X DRAM RAS# to CAS# Delay Auto	
X DRAM RAS# Precharge Auto	
X Precharge Delay (tRAS) Auto	
X System Memory Frequency Auto	
SLP_S4# Assertion Width [1 to 2 Sec.]	
System BIOS Cacheable [Enabled]	
Video BIOS Cacheable [Disabled]	
Memory Hole At 15M-16M [Disabled]	
? PCI Express Root Port Func [Press Enter]	
** Onboard VGA Setting **	
On-Chip Frame Buffer Size [ 8MB]	
DVMT Mode [DVMT]	
DVMT/Fixed Memory Size [128MB]	
Boot Display [VBIOS Default]	
LCD Panel Type [LVDS1 18 1024 X 768]	
LVDS1 Panel Brightness [Level 10]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults



Note: If you are not familiar with chipset, never modify these settings at will.

### DRAM Timing Selectable

Two options are available.

Manual (Manual setup)

By SPD (DRAM timing is set automatically according to memory SPD data)

When selecting Manual, the following five items are configurable; when selecting By SPD, the following five items are not configurable.

### **CAS Latency Time**

Once a SDRAM is installed, the clock latency will be determined by DRAM clock settings. The options are: 5, 4, 3 and Auto.

### **DRAM RAS-to-CAS Delay**

You may set the delay period between CAS and RAS signal for DRAM read & write or refreshing. Shorter delay means quicker response, while longer delay means more stable performance. Options are: 2, 3, 4, 5, 6 and Auto.

### **DRAM RAS Precharge**

If number of cycles is not sufficient enough to ensure that RAS saves its instructions before DRAM refreshing, it may cause incomplete refreshing and the DRAM will fail to maintain its data. Faster precharge means quicker response, while slower precharge means more stable performance. This item is only valid when a SDRAM is installed.

Options are: 2, 3, 4, 5, 6 and Auto.

### **Precharge Delay (t RAS)**

Options are: Auto and 4~15.

### **System Memory Frequency**

Options are: Auto, 533 and 667(MHz).

### **SLP\_S4# Assertion Width**

Four options are available: 4 to 5 Sec.

3 to 4 Sec.

2 to 3 Sec.

1 to 2 Sec.

### **System BIOS Cacheable**

If set to Enabled, the feature will enable the caching of BIOS ROM at F0000h-FFFFFh for better system performance. However, if any program writes into this memory area, it will result in a system error. Options are: Enabled and Disabled.

### **Video BIOS Cacheable**

If set to Enabled, the feature will enable the caching of video BIOS ROM for better system performance. However, if any program writes into this memory area, it will result in a system error. Options are: Enabled and Disabled.

## **Memory Hole At 15M-16M**

This feature will decrease your memory by 1M and allow the few old ISA cards that require this memory to work properly on your system. Options are: Enabled and Disabled.

## **PCI Express Root Port Func**

This item is used to configure PCI-E slot. For motherboards not equipped with PCIe slot, such configuration is not required. If set to Disabled, the slot and slot device will be disabled. For example, onboard network adapter card can be disabled or enabled via PCI-E slot 1.

## **On-Chip Frame Buffer Size**

This feature controls the amount of video memory allocated to integrated graphic card. The system memory can be used as video memory.

## **DVMT Mode**

Three options are available: "FIXED", "DVMT" and "Both (FIXED+DVMT)".

When set to "FIXED" mode, a fixed portion of the system memory will be allocated to GPU. Two allocation sizes are available: 64MB and 128MB.

When set to "DVMT" Mode, the system will dynamically allocate system memory to GPU. In this mode, up to 224MB of system memory can be allocated.

When set to "Both(FIXED+DVMT)" mode, the system will allocate a fixed memory of 64MB as dedicated graphic memory, as well as allow a memory of 64MB to be dynamically allocated between GPU and operating system.

## **DVMT/FIXED Memory Size**

Refer to the previous item.

## **Boot Display**

This feature is to select desired display device. VBIOS, LVDS1, VGA+LVDS1, LCDS2 and VGA+LVDS2 can be selected as display device.

## **LCD Panel Type(LVDS Panel Type)**

This feature is to select between LVDS1 and LVDS2. When selecting LVDS panel, users should be informed of LVDS panel types supported by the motherboard. The following options are available:

LVDS1 18	800X600
LVDS1 18	1024X768
LVDS1 18*2	1280X1024
LVDS1 18*2	1440X900
LVDS1 18*2	1400X1050
LVDS1 18*2	1600X1200
LVDS1 18	1280X800
LVDS1 18	1280X768

LVDS2 24 1024X768  
LVDS2 24\*2 1280X1024  
LVDS2 24\*2 1440X900  
LVDS2 24\*2 1920X1080



Note: Due to limited address length of BIOS, only a portion of panel parameters are listed in BIOS Setup. If the connected panel is not included in the parameter list, display problem will occur. In this case, we need to adjust BIOS setup.

### **LVDS1 Panel Brightness**

This feature provides adjustable brightness control: LEVEL3~10.



Note: This feature is valid only when the panel supports PWM function.

## 3.5 Integrated Peripherals

### Phoenix – AwardBIOS CMOS Setup Utility

#### Integrated Peripherals

? OnChip IDE Device	[Press Enter]	Item Help
? Onboard Device	[Press Enter]	
? Super IO Device	[Press Enter]	Menu Level?

??? ? :Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Select "OnChip IDE Device" item and press "Enter" for setup of IDE devices, as shown by the following figure:

### Phoenix – AwardBIOS CMOS Setup Utility

#### OnChip IDE Device

IDE HDD Block Mode	[Enabled]	Item Help
IDE DMA Transfer access	[Enabled]	
On-Chip Primary PCI IDE	[Enabled]	Menu Level?
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting ***		
X SATA Mode	IDE	

On-Chip Serial ATA	[Auto]	
X SATA Port Speed Setting	[Disabled]	
X PATA IDE mode	[Secondary]	
SATA Port	[P0,P2 is Primary]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

### IDE HDD Block Mode

If your IDE hard disk supports Block mode (most current hard disk products support the feature), select Enabled and BIOS will automatically detect optimum block mode supported by the hard disk. This will improve the transfer performance of hard disk. Options are: **Enabled** and Disabled.

### IDE DMA Transfer Access

Options are: **Enabled** and Disabled.

### On-Chip Primary/Secondary PCI IDE

Each IDE port of integrated peripheral controller supports up to 2 IDE channels. Select Enabled to activate each channel. Options are: **Enabled** and Disabled.

### IDE Primary /Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields allow you to set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Mode 0 through 4 provides successively increased performance. In Auto mode, the system automatically determines the best mode for each device. Options are: **Auto**, Mode 0, Mode 1, Mode 3 and Mode 4.

### IDE Primary /Secondary Master/Slave UDMA

Ultra DMA implementation is possible only if your IDE hard disk supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus mastering driver). If your hard disk and system software both support Ultra DMA/33, Ultra DMA/66 and Ultra DMA/100, select Auto to enable BIOS support. Options are: **Auto** and Disabled.

### On-Chip Serial ATA

The following five options are available:

Disabled (Disable SATA controller)

**Auto** (Allocate SATA/IDE devices automatically)

Combined Mode (IDE+SATA Combo Mode)

Enhanced Mode



SATA Only

### SATA PORT Speed Setting

Three options are available:

Disabled (Disable the feature)

Force GEN I (Enhance transfer speed to 1.5Gb/s, i.e., 150MB/s)

Force GEN II (Enhance transfer speed to 3.0Gb/s, i.e., 300MB/s)

### PATA IDE Mode

The item allows you to configure PATA IDE mode. Setup option: "Secondary",

Select "Onboard Device" item and press "Enter" for setup of onboard devices, as shown by the following figure:

#### Phoenix – AwardBIOS CMOS Setup Utility Onboard Device

USB Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	
USB Keyboard Support	[Enabled]	Menu Level?
USB Mouse Support	[Enabled]	
Azalia/AC97 Audio Select	[Auto]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

### USB Controller

This item allows you to enable or disable onboard USB controller. Options are: **Enabled** and Disabled.

## USB 2.0 Controller

This item allows you to enable or disable USB 2.0 feature of onboard USB controller. Options are : **Enabled** and Disabled.

## USB Keyboard Support

This item determines if USB keyboard is supported in MS DOS. Options are: **Enabled** and Disabled.

## USB Mouse Support

This item determines if USB mouse is supported in MS DOS. Options are: **Enabled** and Disabled.

## Azalia/AC97 Audio Select

This item is used to select Audio mode.

Select "Super IO Device" item and press "Enter" for setup of Super IO devices, as shown by the following figure:

### Phoenix – AwardBIOS CMOS Setup Utility Super IO Device

Onboard Parallel Port	[378/IRQ7]	Item Help  Menu Level?
Parallel Port Mode	[Standard]	
X ECP Mode Use DMA	3	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
UART2 Mode Select	[Normal]	
X RXD , TXD Active	Hi, Lo	
X IR Transmission Delay	Enabled	
X UART2 Duplex Mode	Half	
X Use IR Pins	IR-Rx2Tx2	
Onboard Serial Port 3	[3E8/IRQ4]	

Onboard Serial Port 4	[2E8/IRQ3]	
Onboard Serial Port 5	[4F8/IRQ4]	
Onboard Serial Port 6	[4E8/IRQ3]	
Power On By PS/2 Keyboard	[Disabled]	
Watch Dog Timer Select	[Disabled]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

### Onboard Parallel Port

This item allows you to determine the I/O address and corresponding interrupts for the onboard parallel port LPT. Options are: Disabled, **378/IRQ7**, 278/IRQ5 and 3BC/IRQ7.

### Onboard Serial Port 1/2/3/4

These four selection fields allow you to select the I/O address and corresponding interrupts for serial port COM1/2/3/4. Options are: Disabled, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4 and 2E8/IRQ3.

### Onboard Serial Port 5/6

These two selection fields allow you to select the I/O address and corresponding interrupts for serial port COM5/6. Options are: Disabled, 4F8/IRQ4 and 4E8/IRQ3.

### UART Mode Select

Generally, Onboard Serial Port 2 of motherboard can also be used as infrared port. This item allows you to determine whether Onboard Serial Port 2 is used as normal serial port or infrared port. Four options are available:

- Normal (used as serial port)
- IrDA (used as standard infrared port)
- ASKIR (used as responder infrared port)

### UR2 Duplex Mode

This item will be set to Half Duplex (Half) mode unless your infrared device supports Full Duplex (Full) mode.

### Power On By PS/2 Keyboard

Three options are available:

**Disabled**

Any key  
Keyboard 98

### **Watch Dog Timer Select**

Eight options are available: **Disabled**, 10Sec, 20Sec, 30Sec, 40Sec, 1Min, 2Min and 4Min

## 3.6 Power Management Setup

Power Management Setup allows you to configure your system to ensure an enhanced power-saving effect when user is compliant with system mode.

### Phoenix – AwardBIOS CMOS Setup Utility

#### Power Management Setup

Power Status After AC Fail	[Former Status]	Item Help
?		
ACPI Function	[Enabled]	
Power Management	[User Define]	Menu Level?
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
MODEM Use IRQ	[3]	
Suspend Mode	[Disabled]	
HDD Power Down	[Disabled]	
Soft-Off by PWR-BTTN	[Instant-Off]	
Resume by Alarm	[Disabled]	
X Date{Of Month} Alarm	0	
X Time{hh:mm:ss} Alarm	0 : 0 : 0	
** Reload Global Timer Events **		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 0	[Disabled]	
FDD,COM,LPT Port	[Disabled]	
PCI PIRQ[A-D]#	[Disabled]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

#### PWR Status After PWR Fail

Three options are available:

**Former Status** (restore to former status)

Turn On (start up when power is restored)

Keep Off (remain powered off)

## ACPI Function

This item allows you to enable/disable ACPI functions. Options are: **Enabled** and Disabled.

## Power Management

This category allows you to select the type (or degree) of power saving and gives you direct access to the following modes:

1. Suspend Mode
2. HDD Power Down

Three options are available for Power Management, including two fixed modes.

**User Define**---It allows you to set each mode individually. When not disabled, each of the ranges is from 1min to 15min.

Min Saving---Minimum power management. Suspend Mode=1hr and HDD Power Down=15min.

Max Saving---Maximum power management. Suspend Mode=1min and HDD Power Down=1min.

## Video Off Method

This item determines the display type of monitor.

V/HSYNC+Blank      This option turns off the vertical and horizontal synchronization ports and writes blanks to the video buffer.

Blank Screen      This option only writes blanks to the video buffer.

**DPMS**      This option controls initial display of power management signal.

## Video Off In Suspend

This item determines the display type to be cleared by monitor.

Options are: **Yes** and No.

## Suspend Type

This item is used to select suspend type. Options are: PWRON Suspend and **Stop Grant**

## Modem Use IRQ

This item determines the IRQ used by Modem.

Options are: **3**, 4, 5, 6, 7, 9, 10, 11 and NA.

## Suspend Mode

When enabled, after the set time of system inactivity, all devices except the CPU will be shut off.

Options are: 1/2/4/8/12/20/30/40Min, 1Hour and **Disabled**.

## HDD Power Down

When enabled and after the set time of system inactivity, the hard disk will be powered down while all other devices remain active. Options are: 1/2/3/4/5/6/7/8/9/10/11/12/13/14/15Min and **Disabled**.

### **Soft-Off by PWR-BTTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state. Options are: Delay4Sec and **Instant-Off**.

### **Resume by Alarm**

This feature determines whether to power on the system at a desired time. When set to Disabled, the feature is inactivated; when set to **Enabled**, date and time of power on can be set:

Date(of month) Alarm    Turn on the system at a specific time on each day or on a specific day in a month. If set to **0**, the system will be powered on once every day.

Time(hh:mm:ss) Alarm    Set the time (hh:mm:ss) at which the system will be powered on automatically.

Note: You must restart the system after changing relevant settings, or the setting may not be effective.

### **\*\* Reload Global Timer Events \*\***

This module contains six modules, all of which are provided with two options: Enable and Disable. If set to Enable, the system will be awakened from sleep status when specific event occurs.

## 3.7 PnP/PCI Configurations Setup

This part describes configurations to be made on PCI bus system. PCI, namely Personal Computer Interconnect, is a computer bus that allows I/O device to operate nearly as fast as CPU in its own way. Some technical terms will be mentioned here. We recommend that non-professional users not make changes from factory default settings.

### Phoenix – AwardBIOS CMOS Setup Utility PNP/PCI Configurations

Init Display First	[PCI Slot]	Item Help
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	Menu Level
X IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
** PCI Express Relative Items **		
Maximum Payload Size	[128]	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

#### Init Display First

**PCI Slot** (PCI display device)

Onboard (Onboard display device)

PCIEx (PCIe device)

#### Reset Configuration Data

Normally, you should set this item to Disabled. If you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot up, then

[www.ivedisplays.com](http://www.ivedisplays.com)



select Enabled. This will reset the Extended System Configuration Data (ESCD) after exiting from Setup. Options are: Enabled and **Disabled**.

### **Resource Controlled By**

Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows®95/98. If set to Manual, you may have access into each submenu under this item (each submenu begins with "➤") and select specific resource manually. Options are: **Auto(ESCD)** and Manual.

### **IRQ Resources**

This item determines whether IRQ interrupt is assigned to Plug-and-Play device or Non-Plug-and-Play ISA device.

### **PCI/VGA Palette Snoop**

This item should be left Disabled. Options are: Enabled and **Disabled**.

### **\*\* PCI Express Relative Items \*\***

#### **Maximum Payload Size [128]**

This item allows you to configure maximum payload size of TLP (Transition Layer Packet). Options are: [128], [256], [512], [1024], [2048] and [4096].

## 3.8 PC Health Status

This item shows the current operation status of system.

Phoenix – AwardBIOS CMOS Setup Utility

### PC Health Status

** Smart Fan Control( Thermal Cruise) **	Item Help
CPU Fan Cruise Target [65? /149? ] Fan Cruise Threshold [5? ]	Menu Level ?
** Onboard Health Sensor Status**	
Current System Temperature	
Current CPU Temperature	
CPU Fan Speed	
Vcore(V)	
5Vcc (V)	
Vbat (V)	
5Vsb(V)	

??? ? :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:  
Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

This module mainly shows motherboard information on current operating voltage, CPU temperature, system temperature and fan rotation speed. Refer to actual screen for name of each column.

**CPU Fan Cruise Target/Fan Cruise Threshold:** this item determines the rotation condition of fan when CPU temperature reaches preset value. Options of CPU Fan Cruise Target are: Disable, 55?/131?, 60?/140? and **65?/149?** ; Options of Fan Cruise Threshold are  $\pm 2?$ ,  $\pm 3?$ ,  $\pm 4?$  and  **$\pm 5?$**  . For example, set CPU Fan Cruise Target to <65?/149?> and Fan Cruise Threshold to < $\pm 5?$ >. When CPU temperature rises to 70? (65?+5?), the fan will begin to rotate; when CPU temperature drops to 60? (65? -5?), the fan will stop rotating.

### 3.9 Load Fail-Safe/Optimized Defaults

These two items allow users to load fail-safe or optimized defaults to restore BIOS. Optimized defaults refer to the specific values set by motherboard manufacturer for optimized performance, while fail-safe defaults stand for settings made by BIOS distributor for stable performance.

If you select Load Fail-Safe Defaults, the following information will be shown:

Phoenix – AwardBIOS CMOS Setup Utility

? Standard CMOS Features	Load Fail-Safe Defaults
? Advanced BIOS Features	Load Optimized Defaults
? Advanced Chipset Features	Set Administrator Password
? Integrated Peripherals	Set User Password
? Power Management	Load Fail-Safe Defaults (Y/N)? N
? PNP/PCI Configurations	Exit Without Saving
? PC Health Status	
Esc : Quit                      ??? ? : Select Item	
F10 : Save & Exit Setup	
Load Fail-Safe Defaults	

Press **Y** to load **BIOS** defaults for stable, but lower performance.

If you select **Load Optimized Defaults**, the following information will be shown:

Phoenix – AwardBIOS CMOS Setup Utility	
? Standard CMOS Features	Load Fail-Safe Defaults
? Advanced BIOS Features	Load Optimized Defaults
? Advanced Chipset Features	Set Administrator Password
? Integrated Peripherals	Set User Password
? Power Management Setup	Save & Exit Setup
	<b>Load Optimized Defaults (Y/N)? N</b>
? PNP/PCI Configurations	Exit Without Saving
? PC Health Status	
Esc : Quit                      ??? ? : Select Item	
F10 : Save & Exit Setup	
Load Optimized Defaults	

Press **Y** to load factory settings delivering optimized performance.

## 3.10 Set Administrator/User Password

When selecting this feature, the following information will be shown:

Phoenix – AwardBIOS CMOS Setup Utility

? Standard	CMOS Load Fail-Safe Defaults
Features	
? Advanced BIOS Features	Load Optimized Defaults
? Advanced Chipset Set	Administrator Password
? Integrated Peripherals	Set User Password
? Power Management Setup	Enter Password:
? PNP/PCI Configurations	Exit Without Saving
? PC Health Status	
Esc : Quit                      ??? ? : Select Item	
F10 : Save & Exit Setup	
Change/Set/Disable Password	

Type the password with up to 8 characters and then press <Enter> key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press <Enter> key. You may press <Esc> key to abandon password entry operation.

To clear the password, just press <Enter> key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.

## 3.11 Save & Exit Setup

When selecting this item, the following information will be shown:

Phoenix – AwardBIOS CMOS Setup Utility		
? Standard CMOS Features	Load Fail-Safe Defaults	
? Advanced BIOS Features	Load Optimized Defaults	
? Advanced Chipset Features	Set Administrator Password	
? Integrated Peripherals	Set User Password	
? Power Management Setup	<b>Save &amp; Exit Setup</b>	
? PNP/PCI Conf		
? PC Health Status		
<b>Save to CMOS and Exit(Y/N) ? Y</b>		
Esc : Quit		??? ? : Select Item
F10 : Save & Exit Setup		
Save Data to CMOS		

Press **Enter** key to save the changes and exit from BIOS setup.

## 3.12 Exit Without Saving

When selecting this item, the following information will be shown:

Phoenix – AwardBIOS CMOS Setup Utility		
? Standard CMOS Features	Load Fail-Safe Defaults	
? Advanced BIOS Features	Load Optimized Defaults	
? Advanced Chipset Features	Set Administrator Password	
? Integrated Peripherals	Set User Password	
? Power Management Setup	<b>Save &amp; Exit Setup</b>	
? PNP/PCI Config		
? PC Health Status		
<b>Quit Without Saving (Y/N) ? N</b>		
Esc : Quit                                      ??? ? : Select Item		
F10 : Save & Exit Setup		
Save Data to CMOS		

Press **Y** and then **Enter** key to exit from BIOS setup without saving the changes.

# Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows XP. The software and drivers are included with the motherboard. The contents include **Intel chipset driver** **VGA driver** **LAN drivers** **Audio driver**  
**Installation instructions are given below.**

## **Important Note:**

After installing your Windows operating system (Windows XP), you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.





## 4.1 Intel Chipset Driver

To install the Intel chipset driver, please follow the steps below.

Step 1: Select Chipset from the list



Follow the step-by-step installation process to install the LMS\_SQL driver.







Click Finish, When the installation process is complete, the Setup Complete screen appears. See as picture.




## 4.2 Intel Graphics Media Accelerator Driver


To install the VGA drivers, follow the steps below to proceed with the installation.



1. Click Intel(R) Chipset Family Graphics Driver.





Follow the step-by-step installation process to install the Graphics Media Accelerator driver.

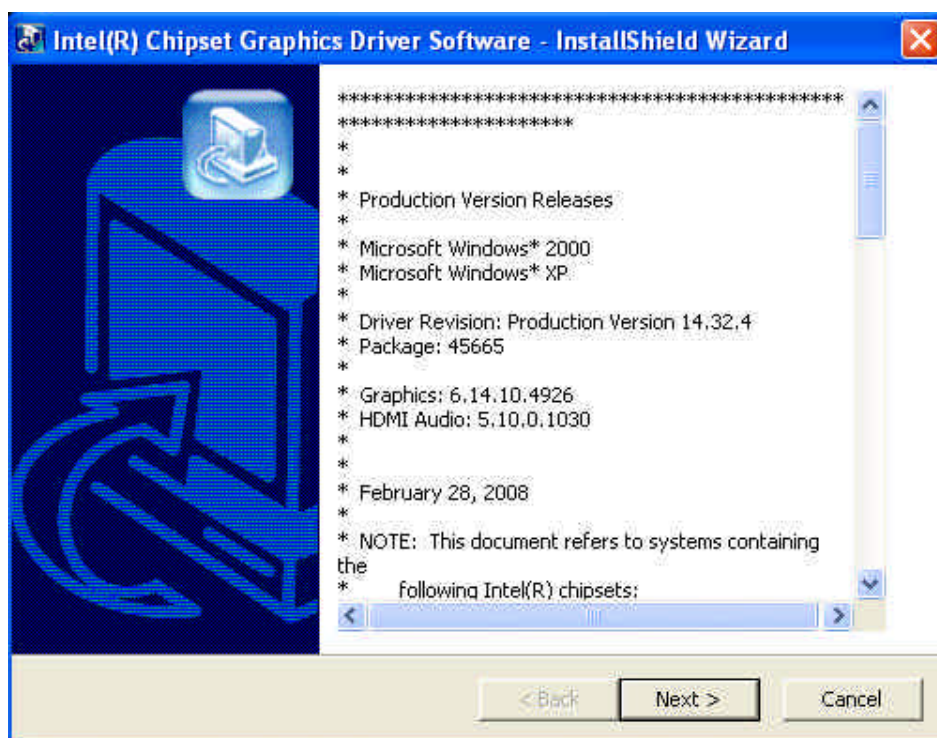

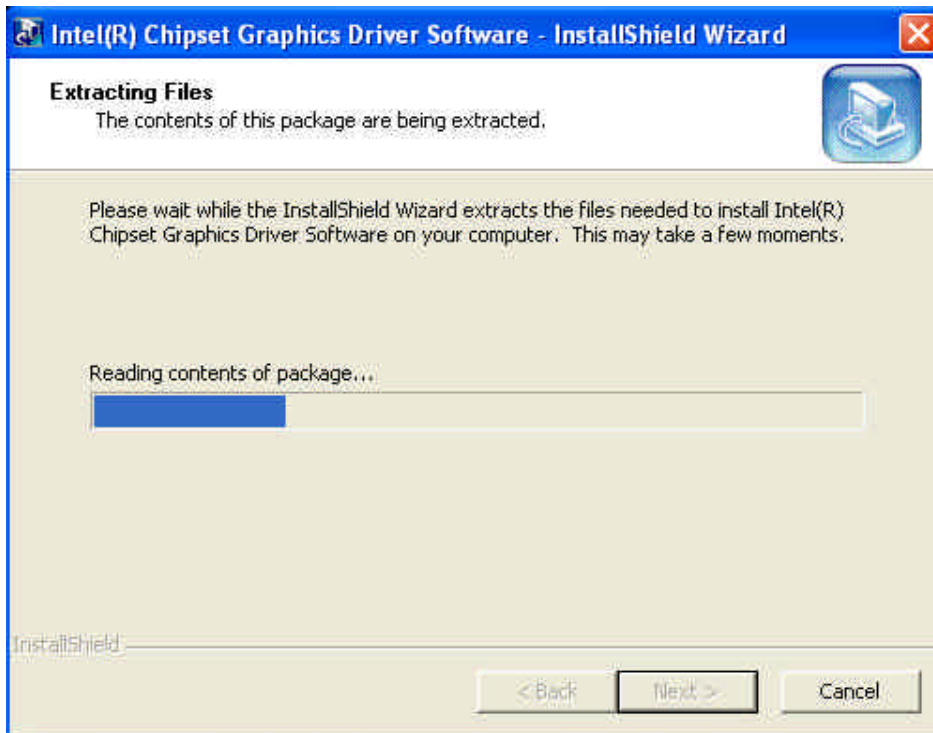

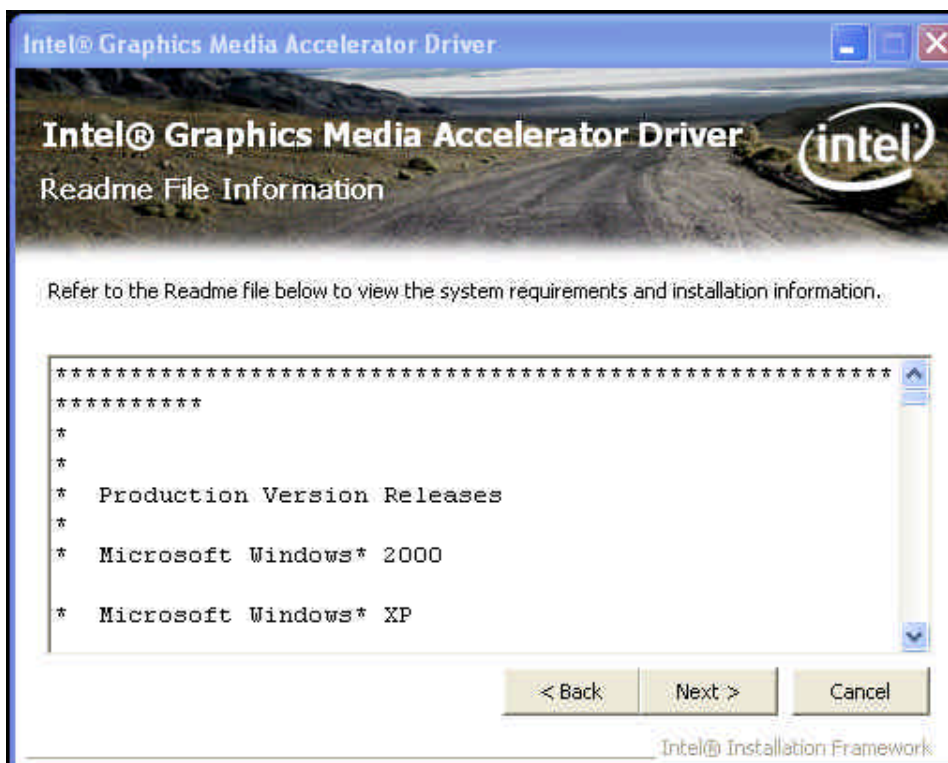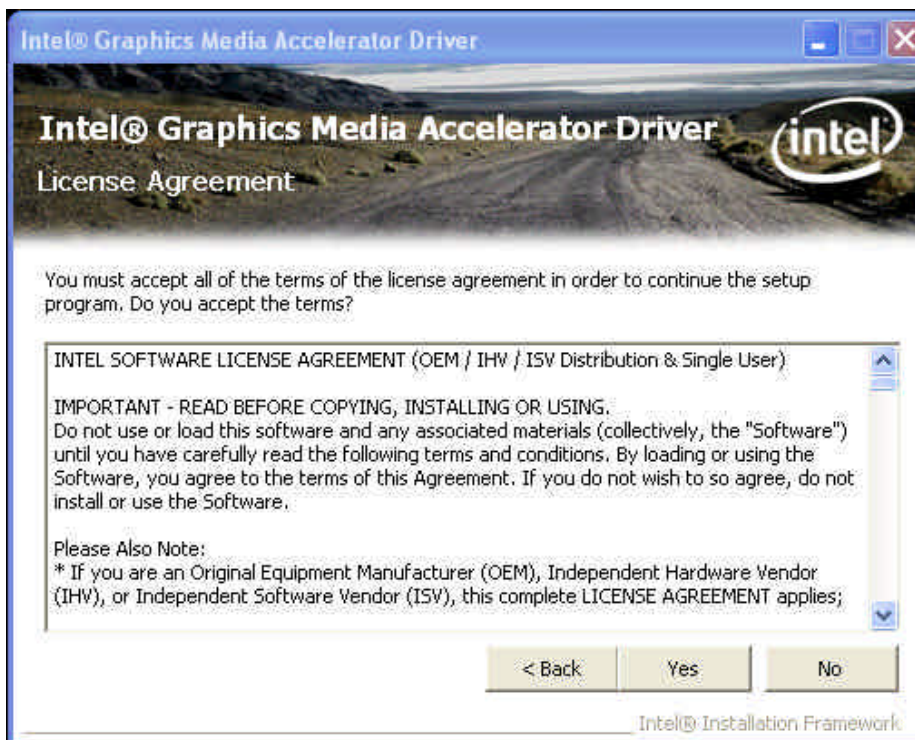

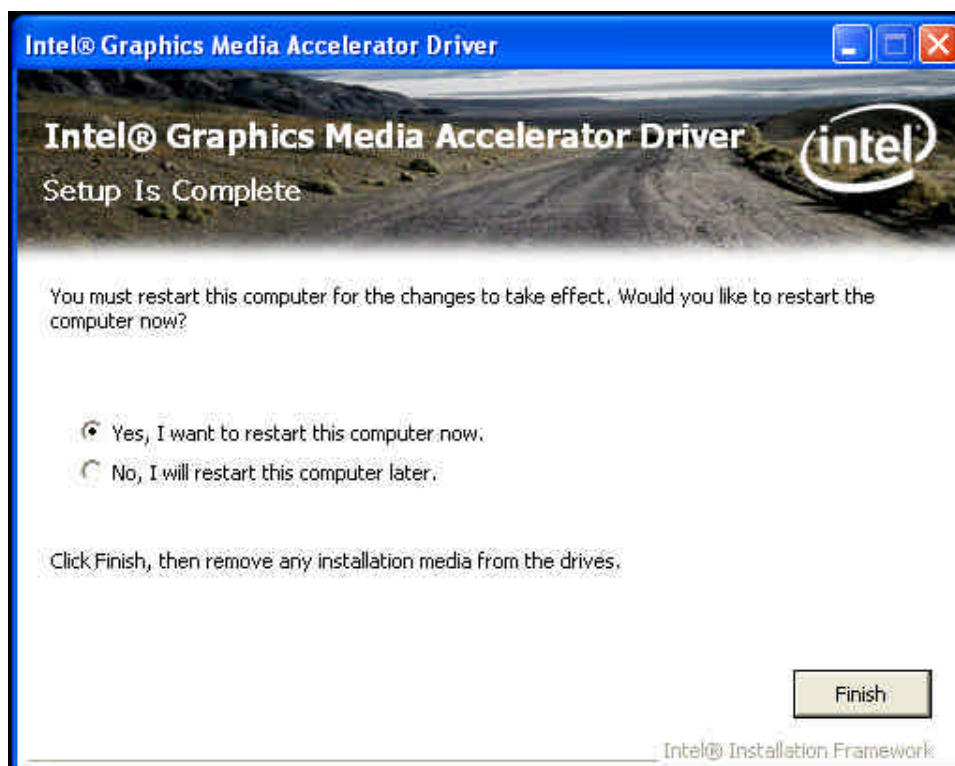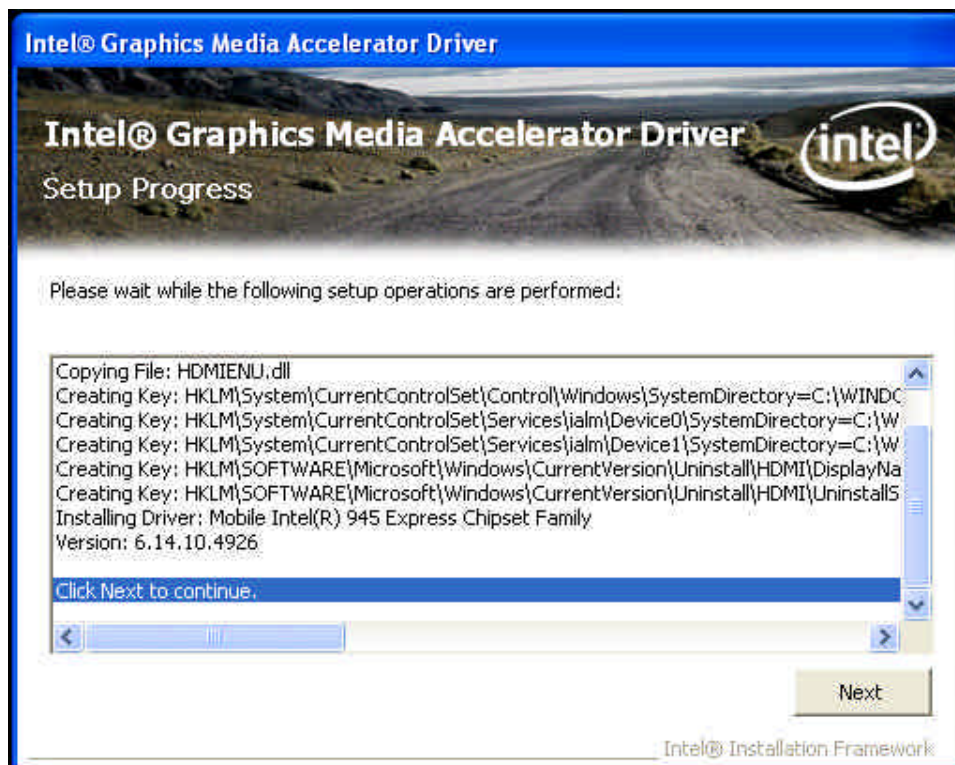

Click FINISH; A Driver Installation Complete.




## 4.3 Realtek Gigabit LAN Driver



To install the Realtek Gigabit LAN connect device driver, please follow the steps below.  
Select LAN from the list





Follow the step-by-step installation process to install the LAN driver.

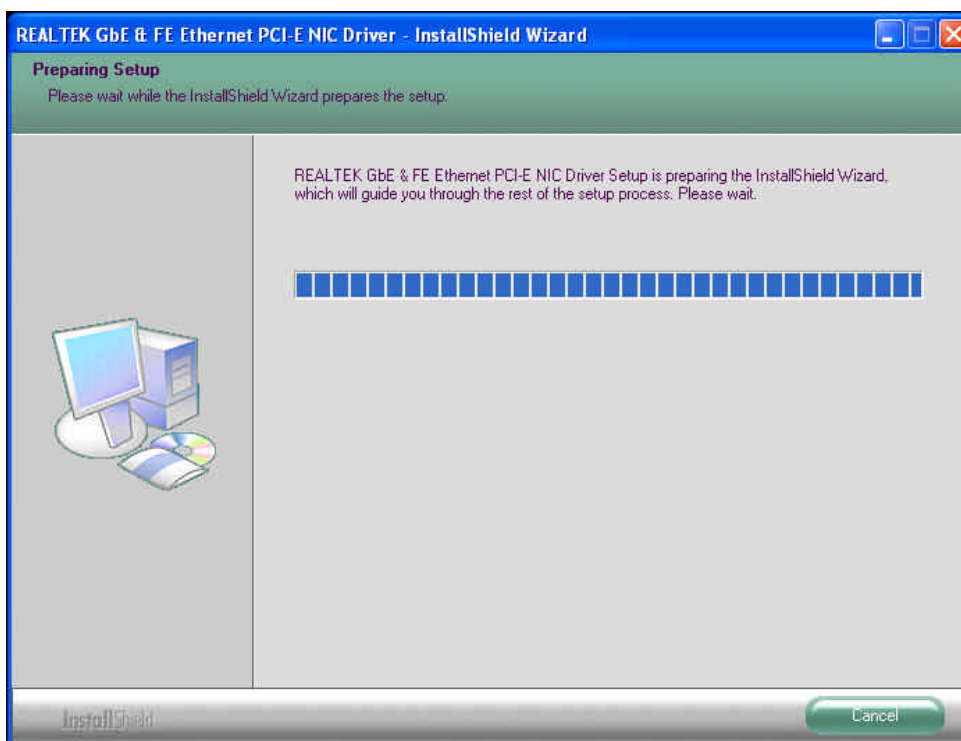



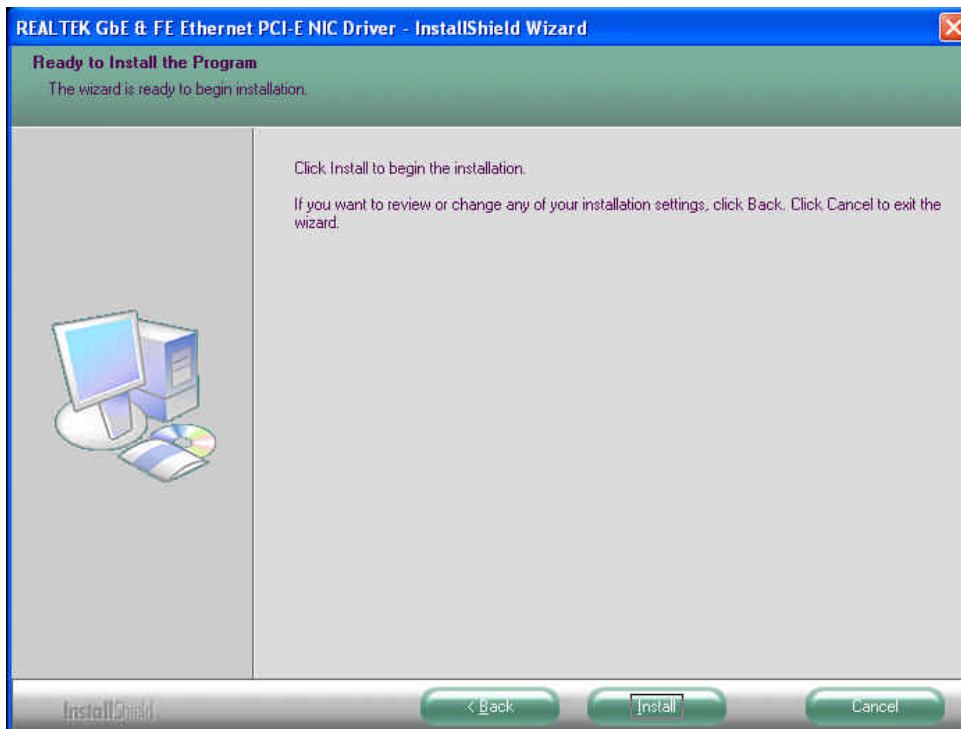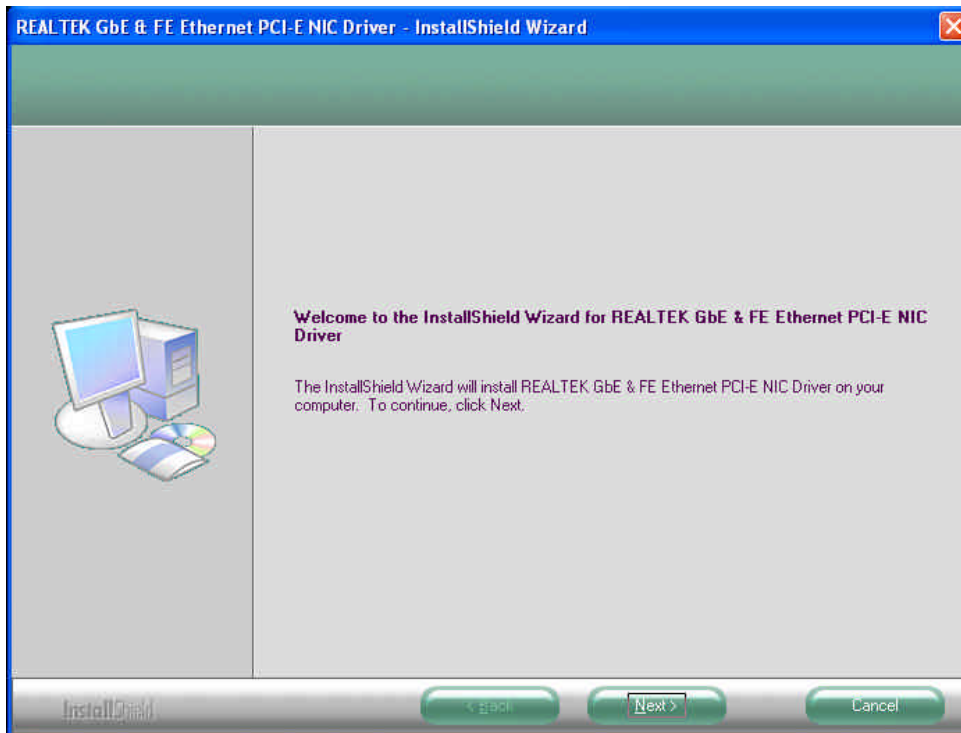

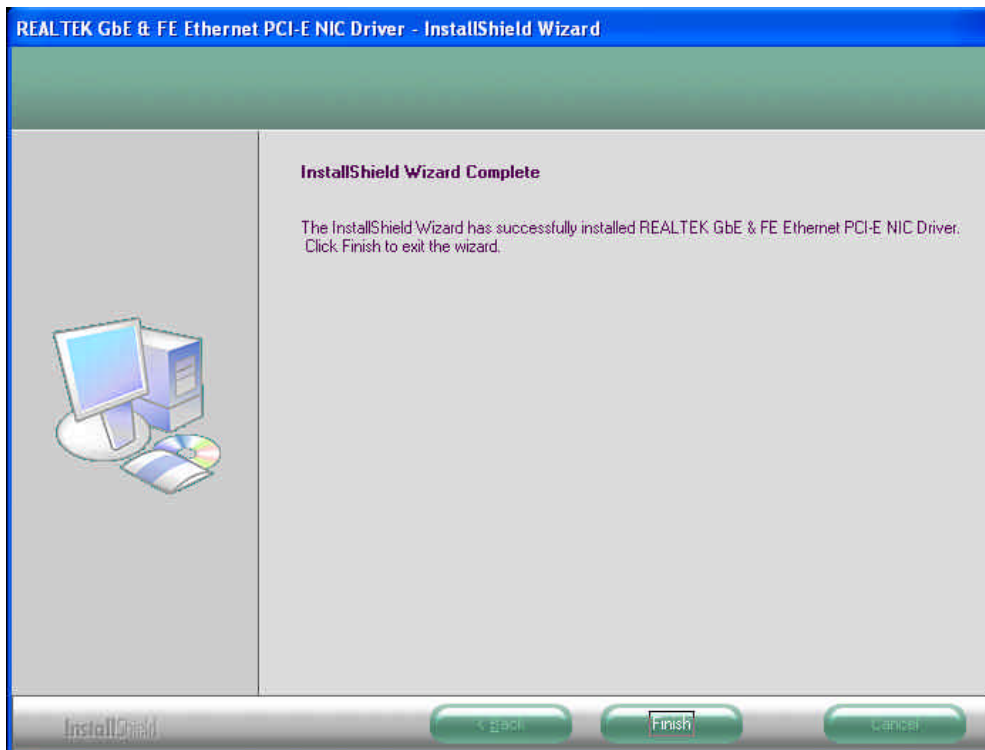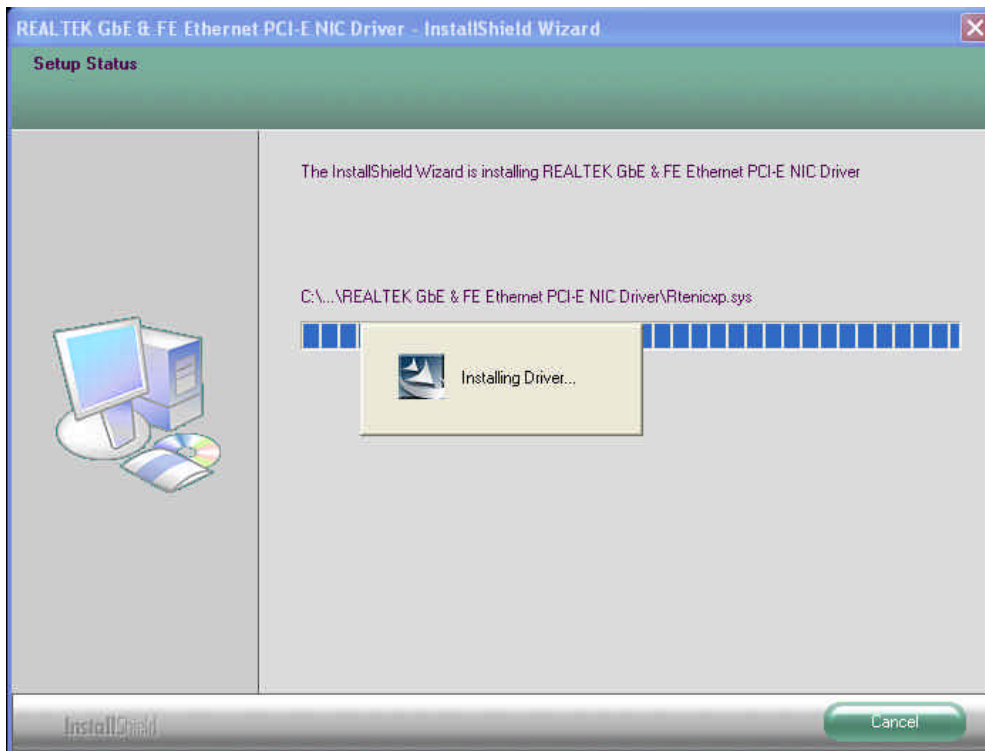


Click FINISH; A Driver Installation Complete .



## 4.4 Realtek HD Driver Installation



To install the Realtek HD Audio driver, please follow the steps below.  
Select Audio from the list



Follow the step-by-step installation process to install the Realtek AC'97 Audio driver.

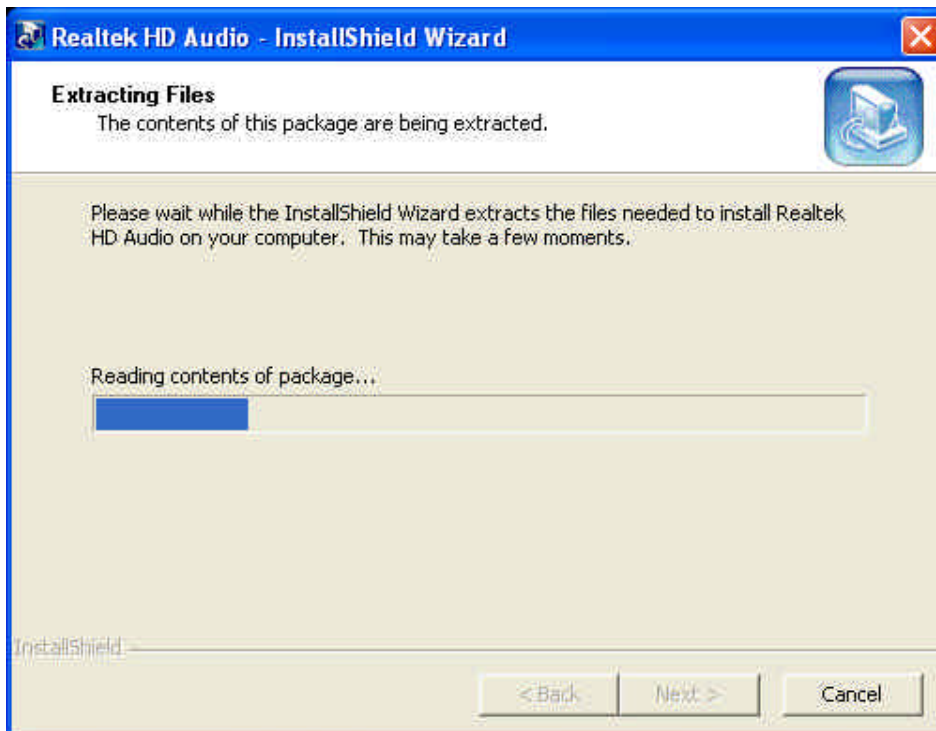

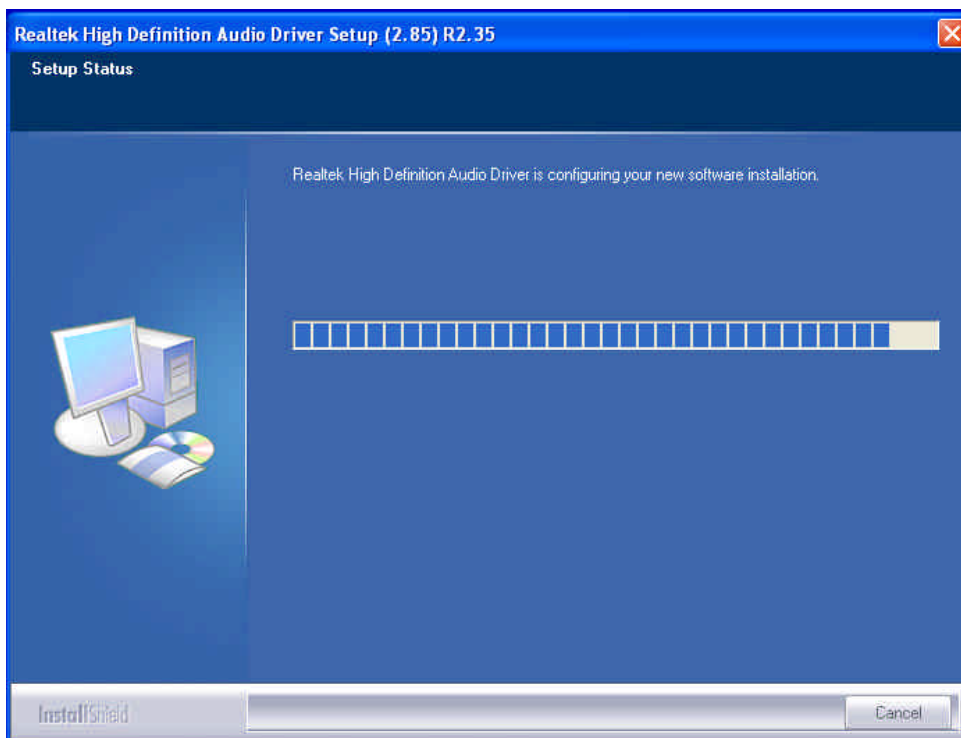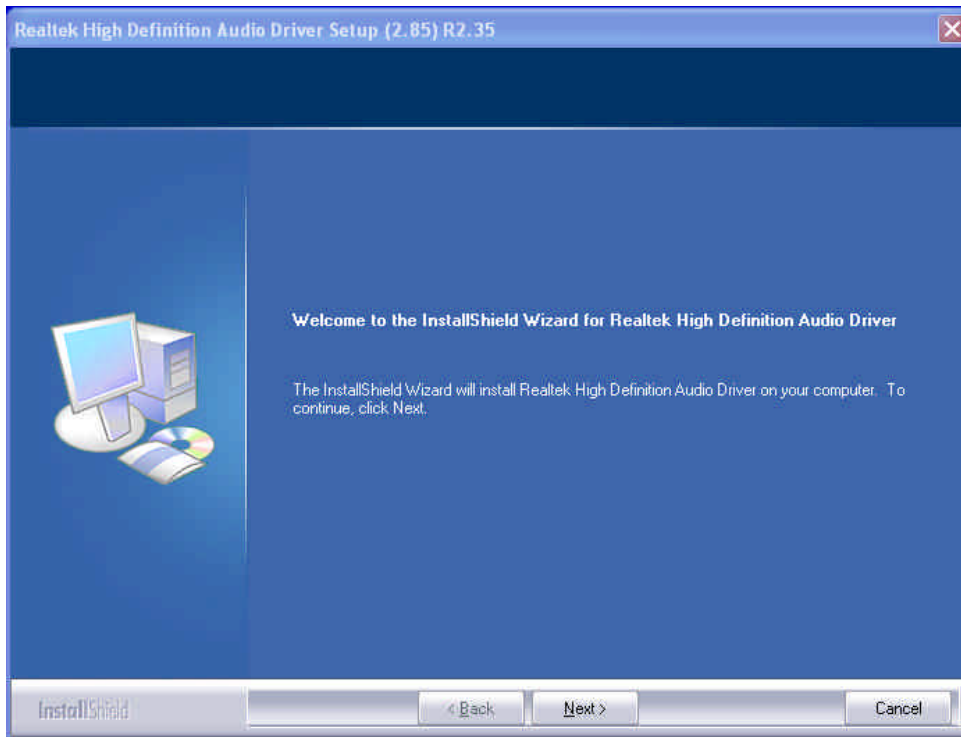

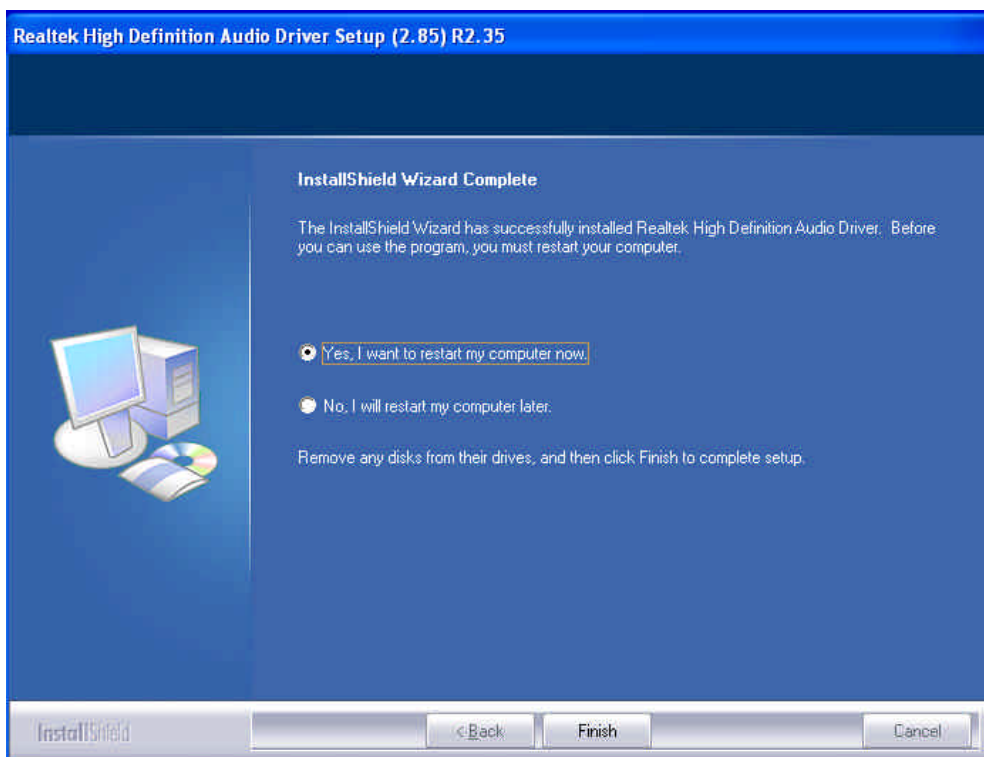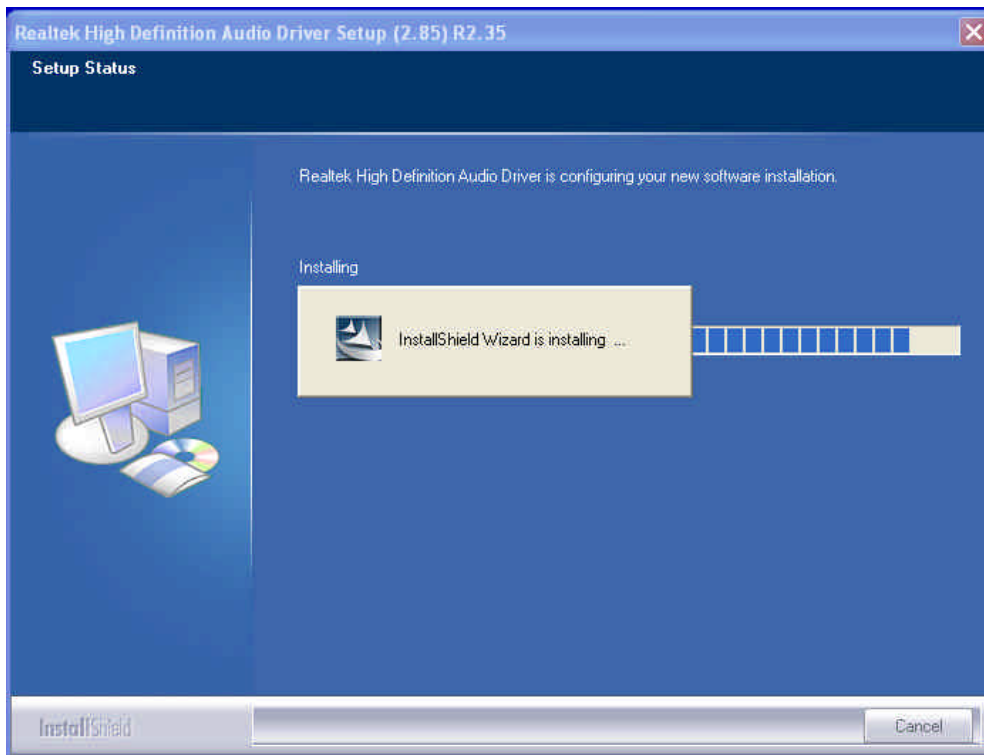

Click FINISH; Audio Driver Installation Complete.


# Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your PenMount 6000 Controller Board to work with different operating systems.

**NOTE:** PenMount USB drivers support up to 15 USB controllers.

## 5.1 Introduction to Touch Screen Controller Board

PenMount 6300 USB control board is a touch screen control board designed for USB interface and specific for 4, 5, 8-wire touch screens. It is designed with USB interface features with multiple devices supporting function. PenMount 6300 control board using PenMount 6000 controller that has been designed for those who may like an all-in-one solution with 10-bit A/D converter built-in to make the total printed circuit board denser, circuit diagram also designed for 12-bit ADC for optional. There are two connectors on this board, one connector is for 4, 5, 8-wire touch screen cable (optional), and another is for 4-pin USB A type cable (optional).

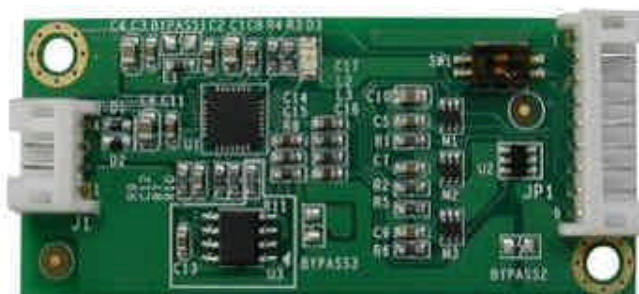

## 5.2.1 Installing Software

If you have an older version of the PenMount Windows 2000/XP driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 2000/XP driver.

1. Please make sure your PenMount 6000 device had plugged in advance. If your device uses RS232 interface, please plugged in before the machine is turned on. When the system first detects the controller board, a screen appears that shows “Unknown Device”. Do not use this hardware wizard. Press Cancel.


2. Insert the product CD install **setup.exe**. the screen below would appear. Click touch panel driver









3. A License Agreement appears. Click **"I accept..."** and **"Next"**

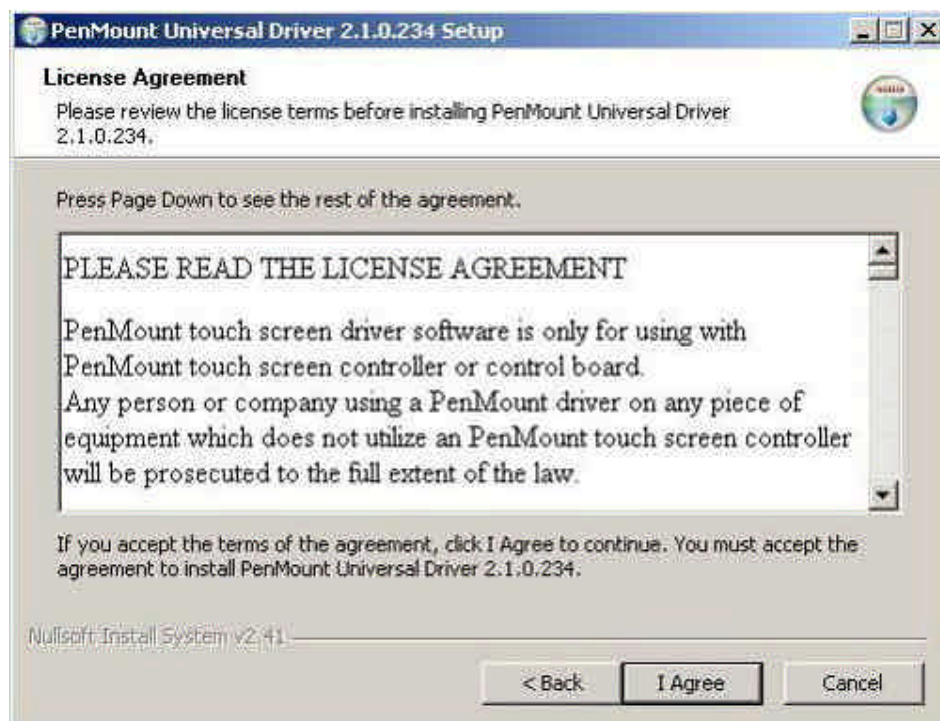


4. Ready to Install the Program. Click **"Install"**



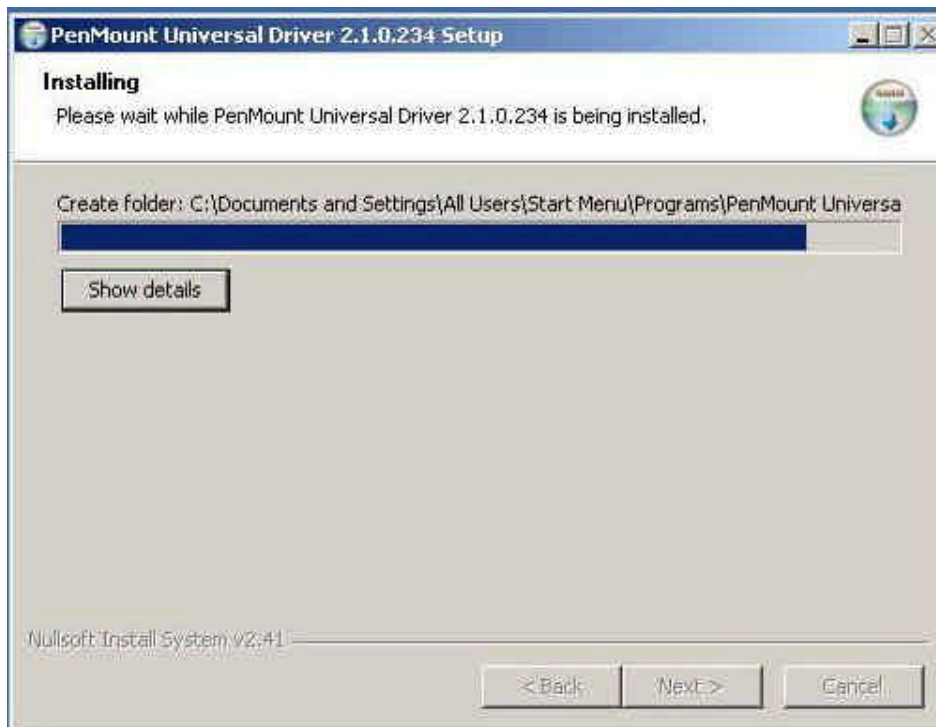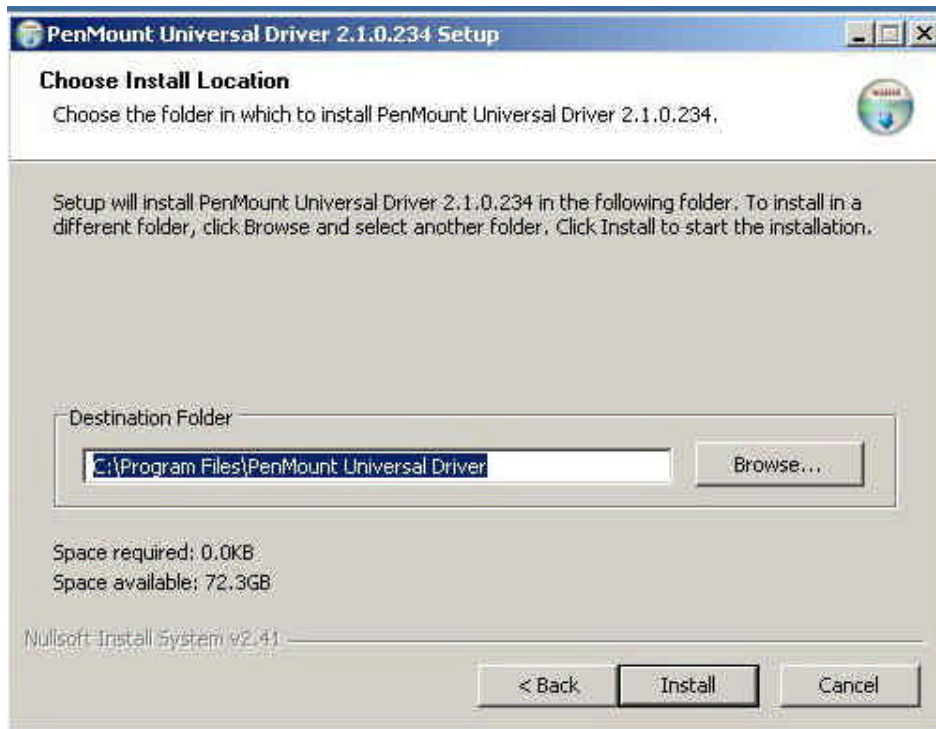

## 5. Installing

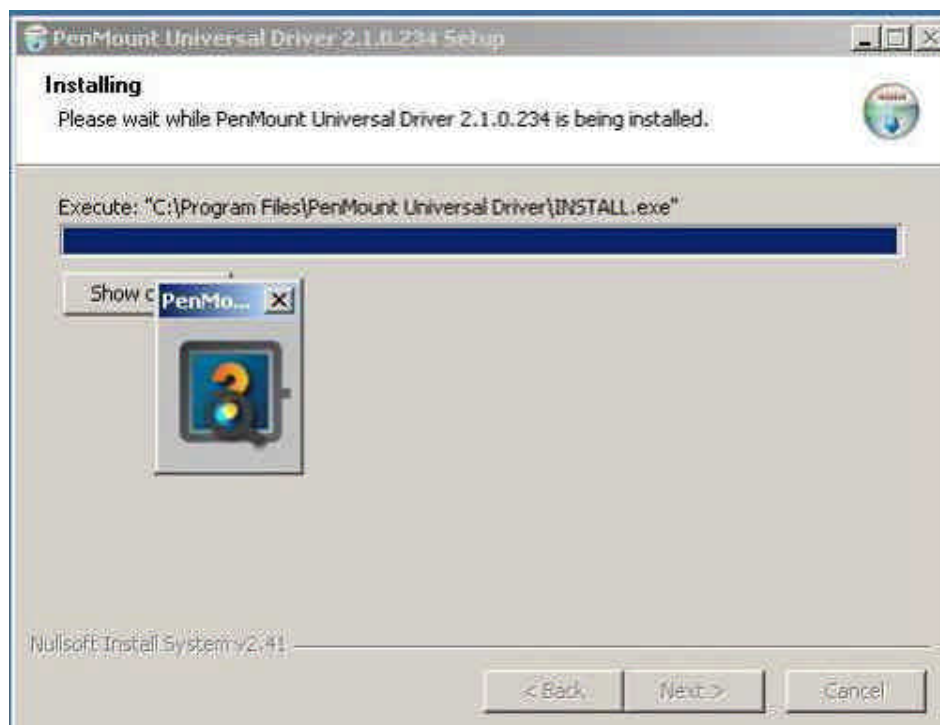

6. The "Install Shield Wizard Completed" appears. Click "**Finish**".



## 5.2.2 Software Functions

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

### PenMount Control Panel

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

### Device

In this window, you can find out that how many devices be detected on your system.

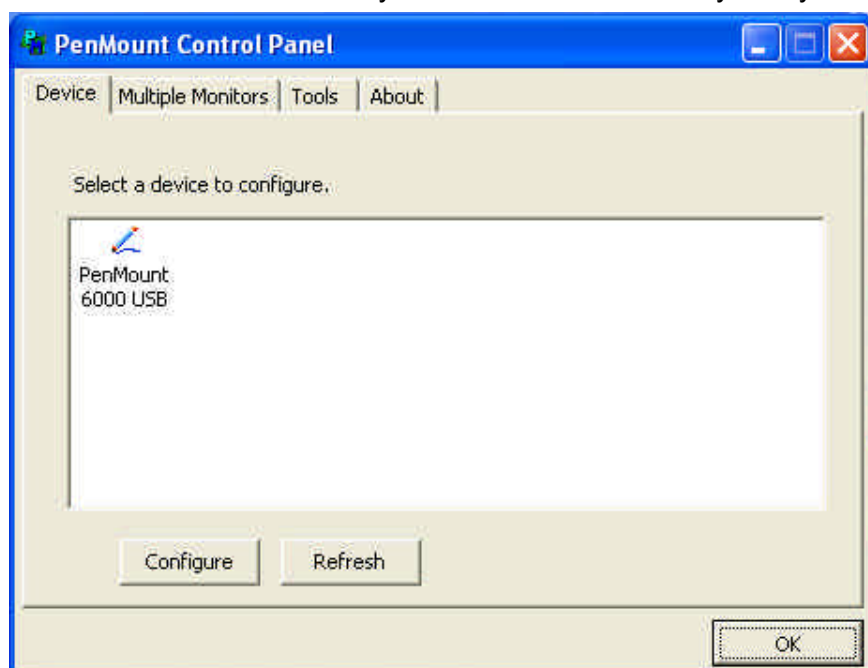


### Calibrate

This function offers two ways to calibrate your touch screen. ‘Standard Calibration’ adjusts most touch screens. ‘Advanced Calibration’ adjusts aging touch screens.


Standard Calibration	<b>Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press ‘ESC’.</b>
----------------------	--

Advanced Calibration	<b>Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.</b>
Command Calibration	<b>Command call calibration function. Use command mode call calibration function, this can uses Standard, 4, 9, 16 or 25 points to calibrate</b> E.g. Please run ms-dos prompt or command prompt c:\Program Files\PenMount Universal Drive\Dmcctrl.exe -calibration 0 ( Standard Calibration) Dmcctrl.exe - calibration (\$) 0= Standard Calibration 4=Advanced Calibration 4 9=Advanced Calibration 9 16=Advanced Calibration 16 25=Advanced Calibration 25

1. Please select a device then click “Configure”. You can also double click the device too.

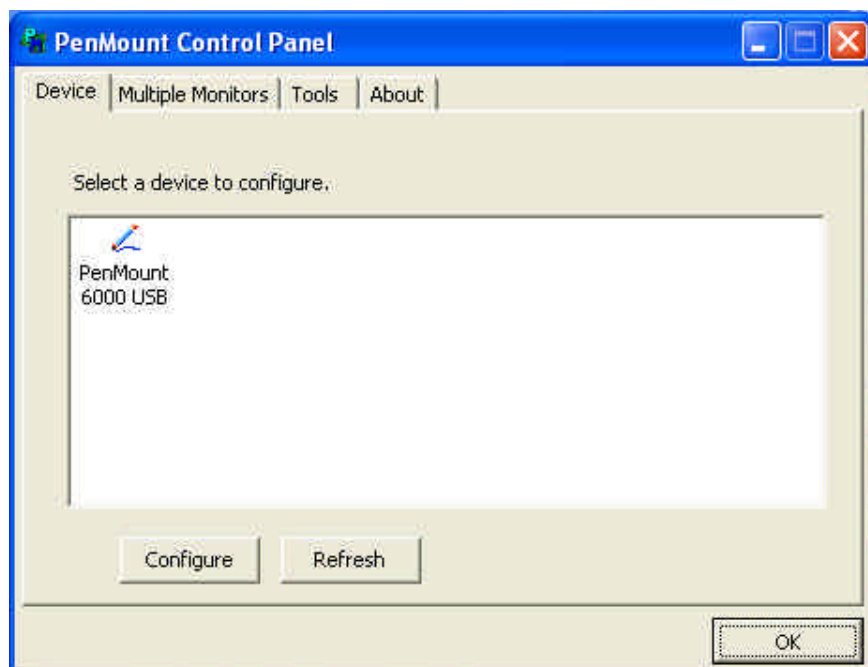


2. Click “Standard Calibration” to start calibration procedure

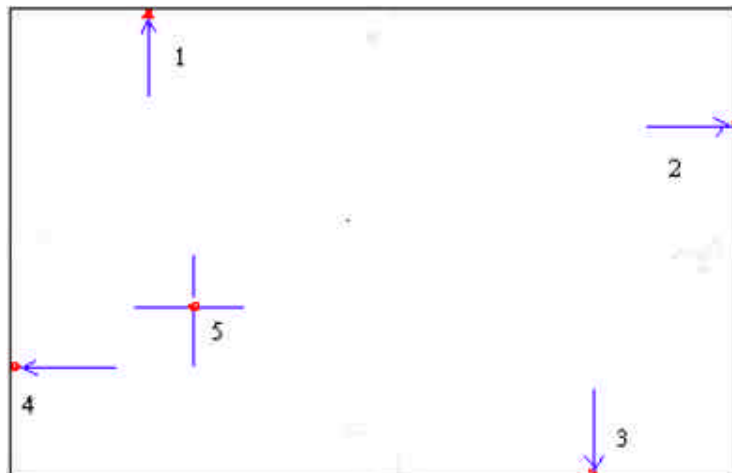


**NOTE:** The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

3. Come back to “PenMount Control Panel” and select **“Tools”** then Click **“Advanced Calibration”**.

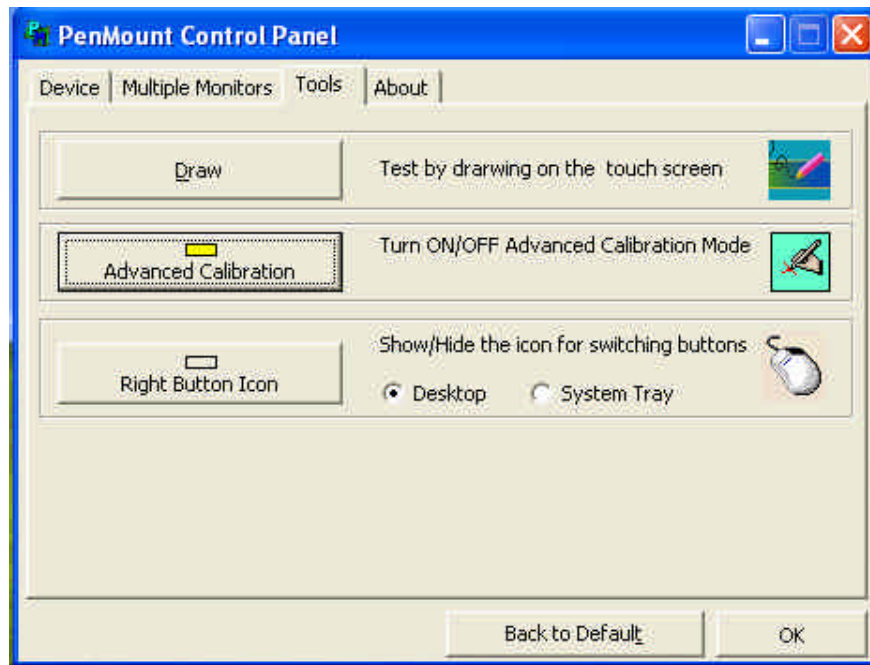

Select “**Device**” to calibrate, then you can start to do “Advanced Calibration”.

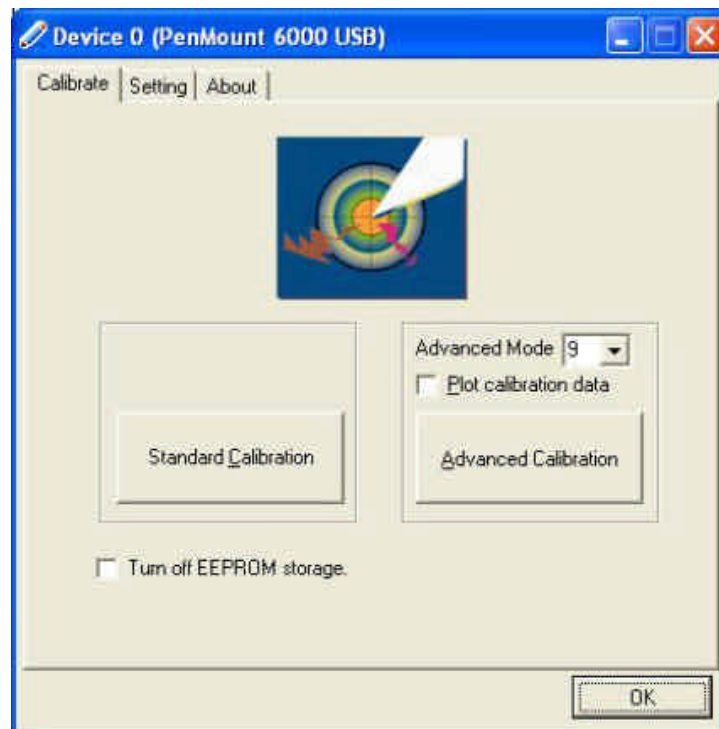

**NOTE:** Recommend to use a stylus during Advanced Calibration for greater accuracy.




Plot Calibration Data	Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.
Turn off EEPROM storage	The function disable for calibration data to write in Controller. The default setting is Enable

## Setting


Touch Mode	<p>This mode enables and disables the mouse's ability to drag on-screen icons—useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and the mouse only provides a click function, and dragging is disabled</p>
Beep Sound	<p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p>
Cursor Stabilizer	Enable the function support to prevent cursor shake.
Use press and hold as right click	You can set the time out and area for you need



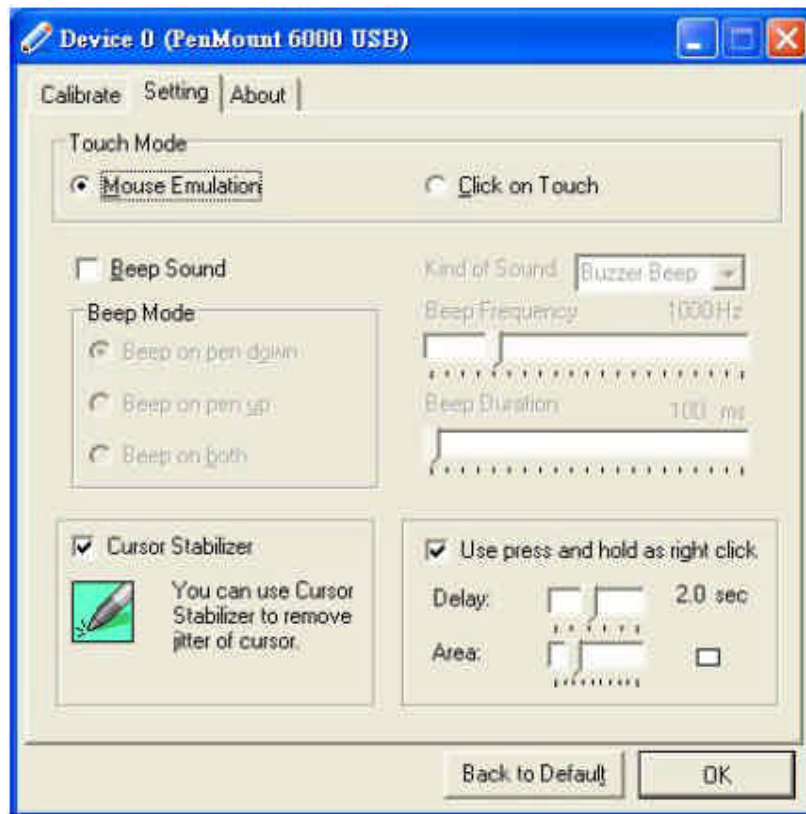

## About

This panel displays information about the PenMount controller and driver version.

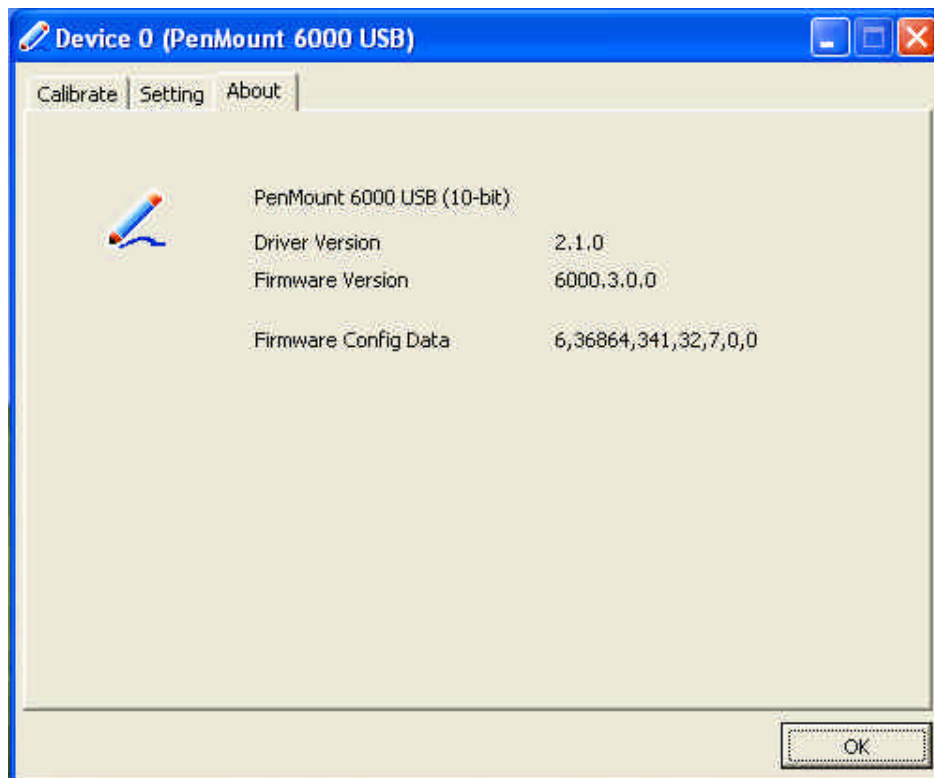



## Multiple Monitors


Multiple Monitors supports from two to six touch screen displays for one system. The PenMount drivers for Windows 2000/XP support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the RS-232 interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors supports the following modes:

Windows Extend Monitor Function  
Matrox DualHead Multi-Screen Function  
nVidia nView Function


**NOTE:** The Multiple Monitors function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the Rotating function is disabled.

### Enable the multiple display function as follows:

1. Check the “**Multiple Monitor Support**” box; then click “**Map Touch Screens**” to assign touch controllers to displays.

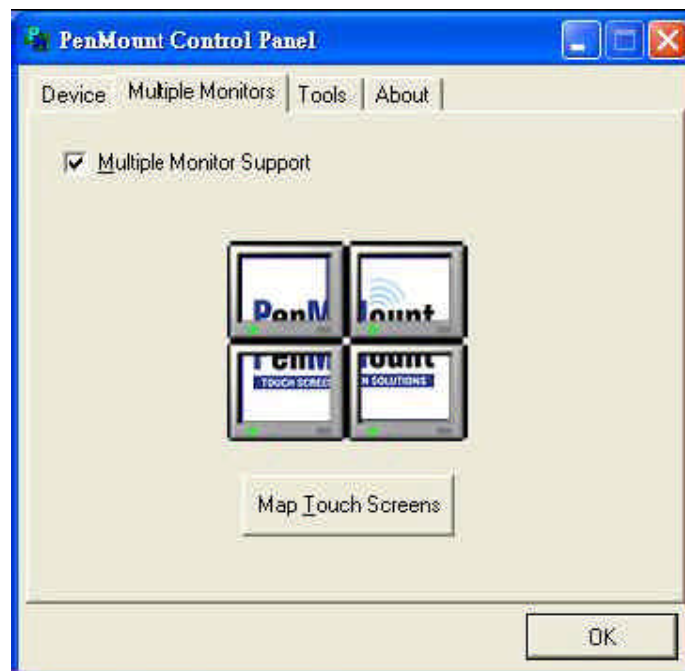

2. When the mapping screen message appears, click “**OK**”

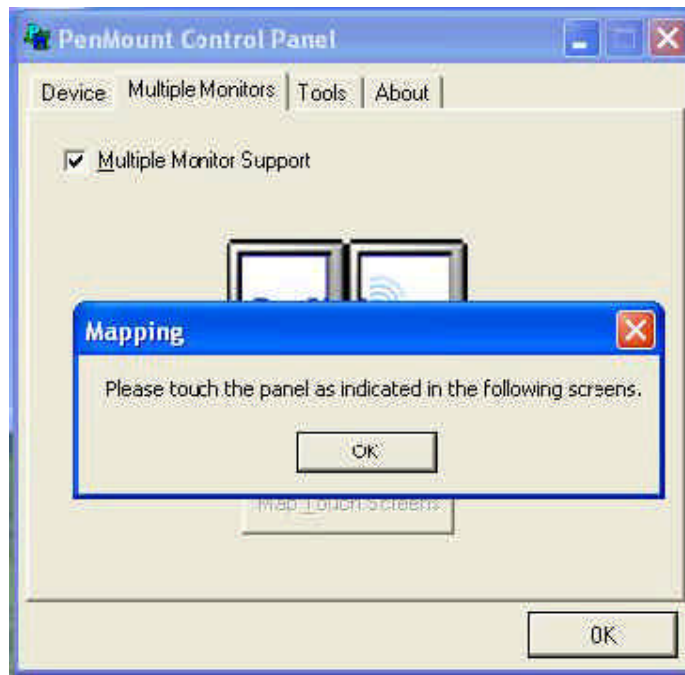

3. Touch each screen as it displays “**Please touch this monitor. Press ‘S’ to skip**” Following this sequence and touching each screen is called **mapping the touch screens**.




4. After the setting procedure is finished, maybe you need to calibrate for each panel and controller

#### NOTES:

1. If you used a single VGA output for multiple monitors, please do not use the **Multiple Monitors** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitors function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens** so the system understands where the displays are.
4. If you more monitor mapping one touch screen, **Please press ‘S’ to skip mapping step.**


## Tools

Draw	Tests or demonstrates the PenMount touch screen operation.
Advanced Calibration	Enable Advanced Calibration function
Right Button Icon	Enable right button function. The icon can show on Desktop or System Tray (menu bar).

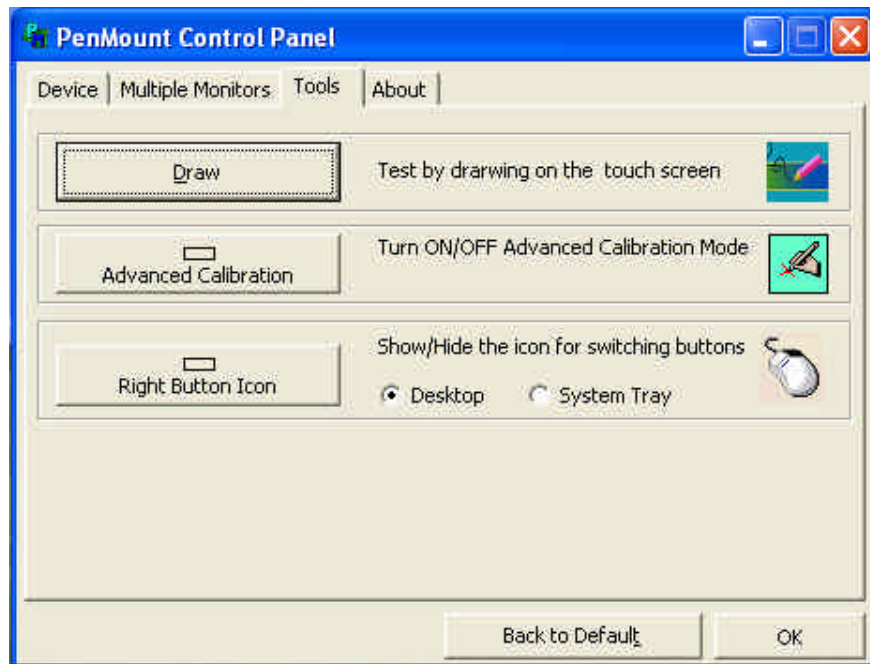

## About

You can see how many devices of PenMount controller that are plugged to your system

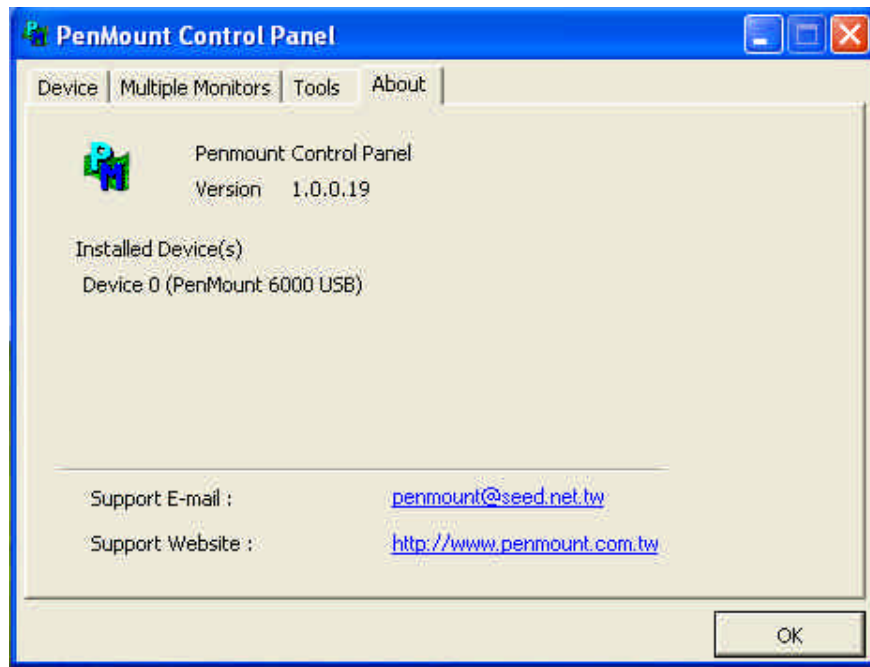

### PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 2000/XP system when you turn on PenMount Monitor in PenMount Utilities.



PenMount Monitor has the following function



Control Panel	Open Control Panel Windows
Beep	Setting Beep function for each device
Right Button	When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions.
Exit	Exits the PenMount Monitor function.

### PenMount Rotating Functions

The PenMount driver for Windows 2000/XP supports several display rotating software packages.


[www.ivcdisplays.com](http://www.ivcdisplays.com)

Windows Me/2000/XP support display rotating software packages such as:

- Portrait's Pivot Screen Rotation Software
- ATI Display Driver Rotate Function
- nVidia Display Driver Rotate Function
- SMI Display Driver Rotate Function
- Intel 845G/GE Display Driver Rotate Function

### Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

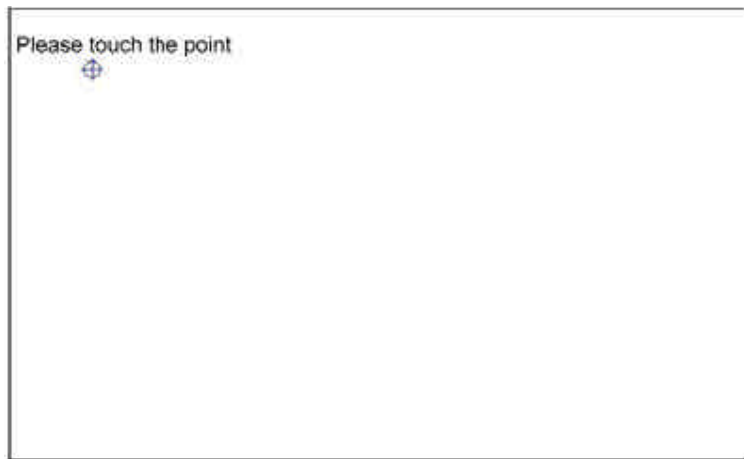

**NOTE:** The Rotate function is disabled if you use Monitor Mapping